

FAB-SCADA SOFTWARE

Version 2.2

———— **User' s Manual** ————

A R R A Y E L E C T R O N I C C O L T D

COPYRIGHT©ARRAY 2002

FAB SCADA

Contents

| | | | |
|---|----|--|----|
| Chapter1 Brief Introduction to FAB-SCADA Sytem..... | 1 | 4.4 Drawing Monitoring Interface..... | 23 |
| 1.1 General Introduction..... | 1 | 4.4.1 Operation Instruments In Drawing Interface.... | 23 |
| 1.2 Network Structure of FAB..... | 1 | 4.4.2 Drawing Tools..... | 24 |
| 1.2.1 Network of 485 Buses..... | 2 | 4.4.3 Drawing the Monitoring Diagram..... | 26 |
| 1.2.2 Network System of Super-Remote Control by MODEM..... | 2 | 4.4.3.1 Page Setting..... | 26 |
| 1.3 Brief Introduction to FAB-SCADA Sytem..... | 3 | 4.4.3.2 Draw the Monitor Diagram..... | 27 |
| | | 4.4.3.3 Analyze the Communicating State..... | 38 |
| Chapter 2 Installation Of SCADA Sytem..... | 4 | Chapter 5 User Management..... | 39 |
| Chapter 3 Operation Instructions and Quick Buttons...8 | | 5.1 Modify Manager Name..... | 39 |
| 3.1 Instructions and Buttons in the Control Interface...8 | | 5.2 User Manage..... | 39 |
| 3.1.1 System (Operation Instructions for System Management)..... | 8 | 5.2.1 Append..... | 40 |
| 3.1.2 Mronitor(Operation Instruction for Monitor Setup)..... | 8 | 5.2.2 Delete..... | 40 |
| 3.1.3 User (User Management Instructions)..... | 9 | 5.2.3 Modify Password..... | 40 |
| 3.1.4 Query (Query instructions of the System)..... | 9 | 5.2.4 Query the User Information..... | 41 |
| 3.1.5 Report..... | 10 | 5.3 User Login..... | 41 |
| 3.1.6 Tools..... | 10 | 5.4 User Logout Logout..... | 42 |
| 3.1.7 Help..... | 10 | 5.5 Explanations for User Authorities..... | 42 |
| 3.2 Operation Instructions and Quick Buttons in Drawing Interface..... | 11 | Chapter 6 System Configuration..... | 43 |
| 3.2.1 File (Files management)..... | 11 | 6.1 Set FAB Time..... | 43 |
| 3.2.2 Edit..... | 11 | 6.2 Print..... | 43 |
| 3.2.3 Tools..... | 12 | 6.3 Deploy..... | 44 |
| 3.2.4 Help..... | 12 | Chapter 7 Data Query..... | 46 |
| Chapter 4 Build a Supervisor Control System..... | 13 | 7.1 Data Query..... | 46 |
| 4.1 Station design..... | 13 | 7.2 Back-up the Data Base..... | 48 |
| 4.2 Add/Delete FAB..... | 15 | Chapter 8 Report..... | 50 |
| 4.3 Define the FAB I/O Port..... | 17 | 8.1 Create Report..... | 50 |
| | | 8.2 Browse..... | 55 |

CHAPTER 1 Brief Introduction to FAB-SCADA System

1.1 General Introduction

SCADA System is the System for Supervisor Control and Data Acquisition. It can collect digital and analog of the fields, carry out live or remote real-time control over the fields controlled by the FABs and provide with necessary resource management function.

FAB-SCADA System Software is an easily operated, widely used industrial software for the realization of network function of the FAB Intelligent Controller. It uses FAB as the terminal control unit and it is a network system that collectively carries out the real-time data acquisition and supervisor control over the FABs that separately carry out the auto-control task. On the basis of the FAB-SCADA System Software, users can build complete supervisor management system from PCs to FABs of the control according to the specific field environments and requirements.

Except the basic functions of common PLC, FAB has some special functions: real-time clock function, input and transmission of the analog, voice function, network and remote supervisor control function and so on. In this manual we will introduce how to use the network of FAB Intelligent Controllers to drive FAB-SCADA System.

1.2 Network Structure of FAB

There are several methods of supervisor control system to use FAB as the site-control unit. Users may build the following three supervisor control systems according to different control requirements.

Scheme 1: Network of 485 Buses is suitable for control system of small scale and short distance (in the range of less than 1.2 kilometers). (As in Fig. 1-1)

Scheme 2: Network System of Supervisor control by MODEM is suitable for control system of small scale and long distance. (As in Fig. 1-2)

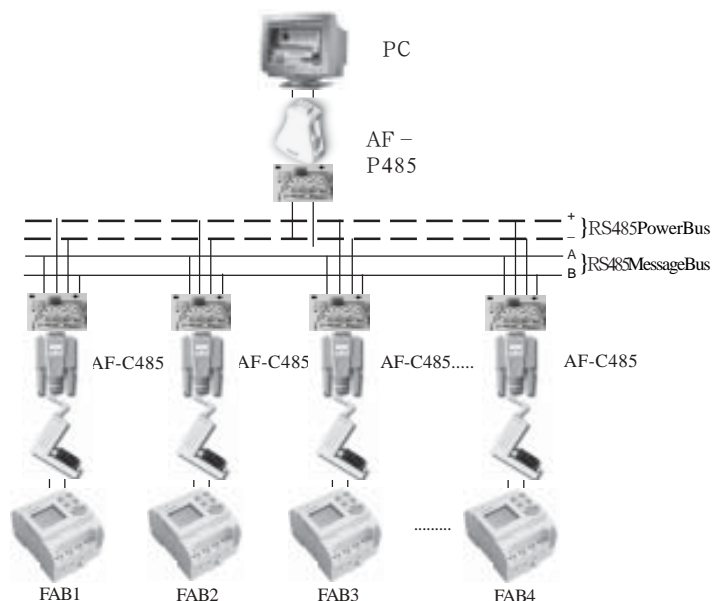


Fig. 1-1 Serial Communication Using RS485

1.2.1 Network of 485 Buses

The above diagram is the schematic diagram of the control system using FAB Intelligent Controller as the field-control unit. For FAB with a special communication port, it is convenient to use the method via 485 buses.

PC, the upper-machine, communicates with FABs using PC Port via 485 buses. In this system, a PC Port can communicate with maximum of 255 independent FABs separately. In other words a PC can supervise the running state of 255 FABs simultaneously. If the PC port is expanded, a PC can communicate with infinite number of FABs.

This system is of small structure and can easily be built with other machines. It also greatly simplifies the DCS system. Comparing with other field networks of buses, it not only can provide a clear field supervisor diagram from the top to the bottom, but can also minimize the cost of the users. Building this control network, it is only needed to be equipped with the communication adaptor of AF-C232, AF-P485 OR AF-C485.

Notes: This system is suitable for small scale in general in the range of less than 1.2 kilometers, for example modern residential quarters and so on.

1.2.2 Network System of Long Distance Remote Control by MODEM

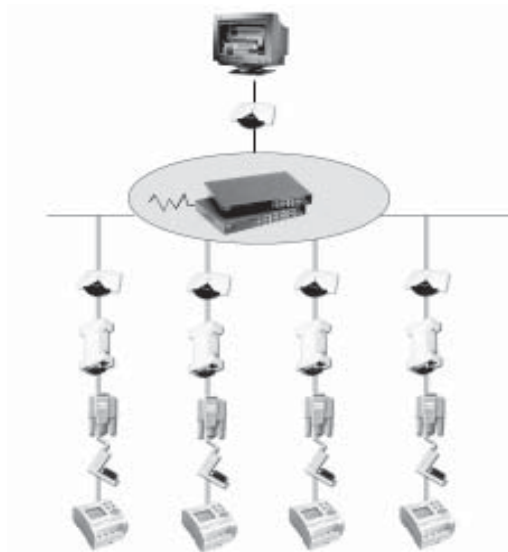


Fig. 1-2 Remote control Using MODEM

If you need to carry out long distance (no limit via telephone network) supervisor control, whether using one FAB or many FABs, you may realize it by using the designing method of the above figure by the aid of telephone network and MODEM.

Building this supervisory control network, you need to equip with AF-M232, AF-C232 and a standard MODEM together with telephone network, also to select a voice module. The features of this kind of monitor network is as follows:

1. PC, the upper machine scans the FAB control unit at the control end in circle, to realize the real time control.
2. When realizing the long distance real time control using a FAB, the PC may realize the maintenance function to the downloading program of the FAB at the far end.
3. Being set to monitor the breakdown status of a station, the FAB, the lower machine, will give alarming

signals to PC, the upper machine, if a breakdown is taking place. If being equipped with a voice module, it will send voice alarming signals and dial the pre-set telephone number to alarm.

1.3 Brief Introduction to FAB-SCADA System

FAB-SCADA System provides the users with a friendly secondary development interface and makes it possible for the users to build a control system as they need. It may be the collective control of intelligent residential quarters or of PCs dispersed in cities.

The displaying in Fig. 1-3 is the FAB-SCADA System control displaying main tableau. In the tableau, you only need to click the mouse and invoke the control flow diagram to monitor the field data and state of different control network spots, observe the resources, print the report and so on.

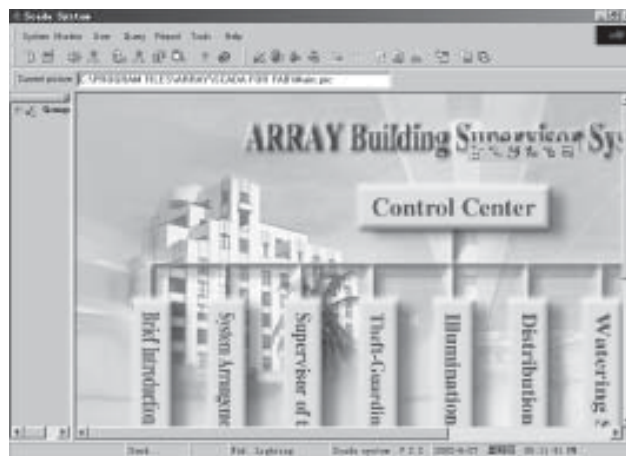


Fig. 1-3 Main Diagram of FAB-SCADA

In order to make it possible for the users to build their own control system, FAB-SCADA Software provides the users with a friendly secondary development interface as shown in Fig. 1-4. In this interface, you may freely build the network system of your own by using draw tools.

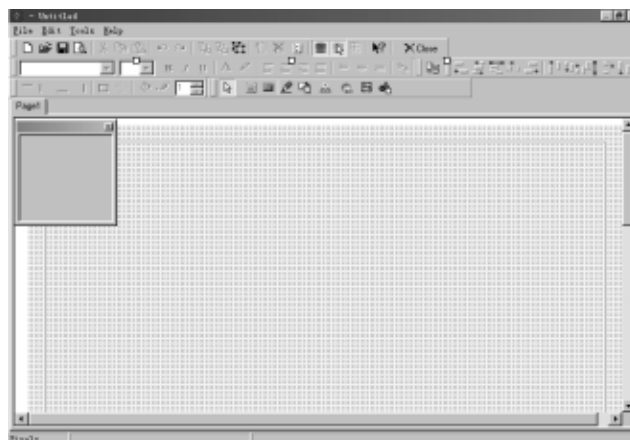


Fig. 1-4 Drawing Interface

Chapter 2 Installation of SCADA System

SCADA System can be used in the environment of WIN9X/WINNT/WIN2000 and so on and the hardware requirements are above 586.

Detailed installation steps are as follows:

Step 1. Insert the CDROM disk into the disk drive a breakdown. The installation system will run automatically and the following installation interface will appear;

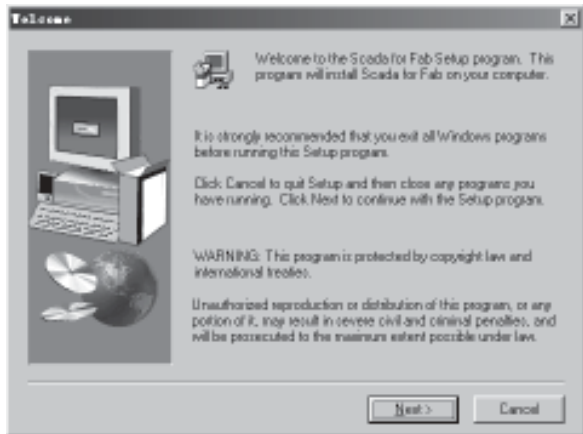


Fig. 2-1 Installation Interface 1

Step2. Click 'Next' to continue in Fig. 2-2. Key in the users' information and click 'NEXT' to continue in Fig. 2-3;

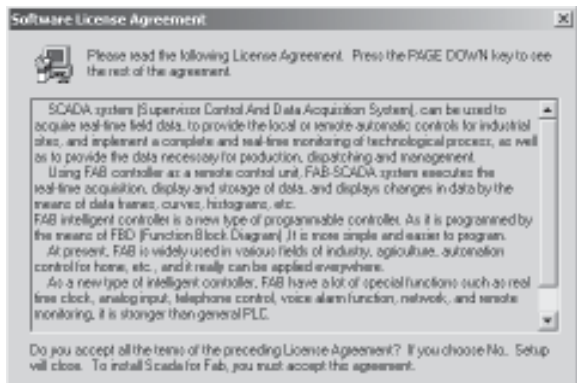


Fig. 2-2 Installation Interface 2

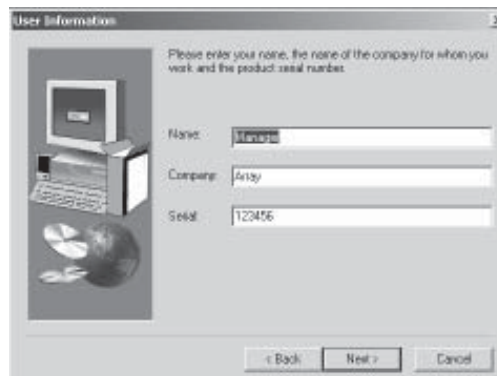


Fig. 2-3 Installation Interface 3

Step 3. Setup destination directory. Click **°Browse±** and then you can setup the destination directory. The system default destination directory is C:\Program Files\array\SCADA For FAB;

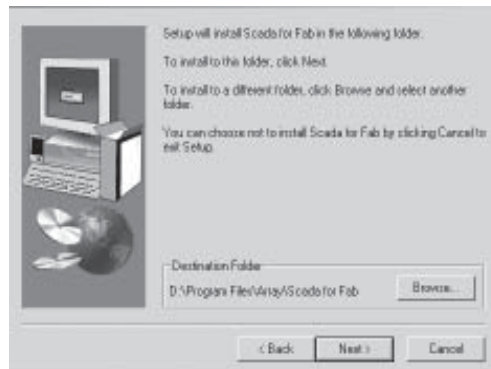


Fig. 2-4 Installation Interface 4

Step4. Setup Installation/Deletion Folders. (This item will appear in the function menu of **°Control Panel°Add/Delete°**. We select **°SCADA for FAB** for example). Completing the setup, click **°Next±** to continue in Fig. 2-5.

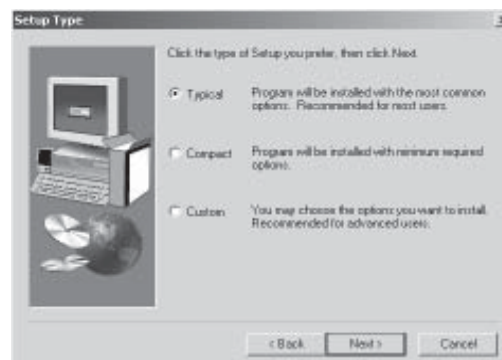


Fig. 2-5 Installation Interface 5

Step5. In Fig. 2-6, if you want to run the system immediately, select **°Yes±**. Launch the program file. We don't want to run the system immediately and click **°Finish±**.



Fig. 2-6 Installation Interface 6

Step 6. Run SCADA System. Select `Programs > SCADA for FAB` and then click the icon. Scada

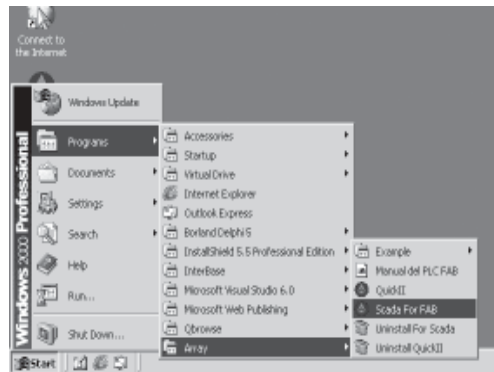


Fig. 2-7 Run SCADA System

Step 7. Uninstall the system. This task needs to be run when the system is not needed or the system does not work normally. (Certainly, data need to be backed up before the uninstallation. As to backup, we will explain further in the following chapters). Click `Setup > Control Panel` in Fig. 2-8, and then click `Installation` to enter the interface in Fig. 2-9. Select `SCADA for FAB Setup` while installation) in the Listing Frame and then click `Add/Delete`.

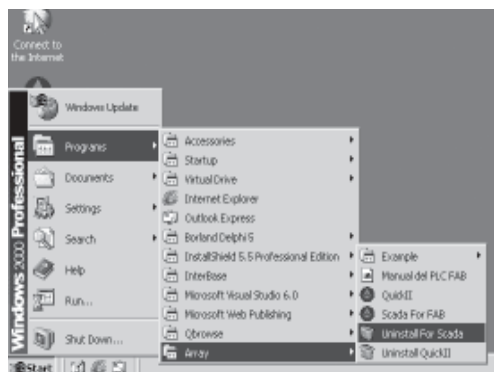


Fig. 2-8 Installation System 1

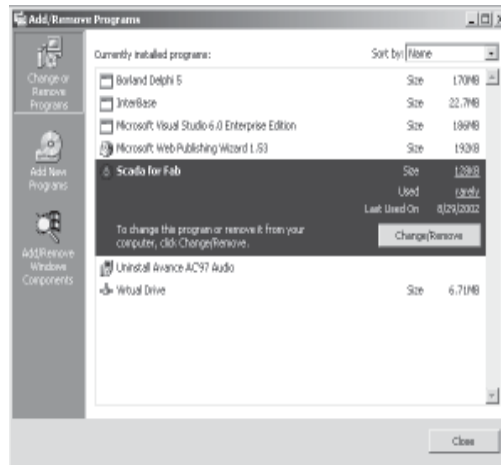


Fig. 2-9 Installation System 2

Chapter 3 Operation Instructions and Quick Buttons

3.1 Instructions and Buttons in the Control Interface

In the instruction toolbar of FAB-SCADA system running state there are some main operation instructions such as System, Monitor, User, Query, Report, Tools and Help. They are used to complete the system equipping and to observe the values. We will introduce their functions one by one in the following.

3.1.1 System (Operation Instructions for System Management)



Fig. 3-1 System instruction

Set FAB time: Deliver the current time of the computer to FAB controllers and is equivalent to the quick button

Printer: Print the report and is equivalent to the quick button

Deploy: When the user edits a control system, he can package all the diagrams under the SCADA directory and related files into one engineering file and then deploy it to other computers. Receiving the engineering files, other computers can install all the diagrams and equipping files in it under the SCADA system environment. And it is equivalent to the fast button

Exit: Close the SCADA system and is equivalent to the quick button

3.1.2 Monitor (Operation Instruction for Monitor Setup)

Operation Instructions for Monitor Setup include Clear alarm, Draw tools, Station Design, Add/Delete FAB, Design FAB and Design Var.

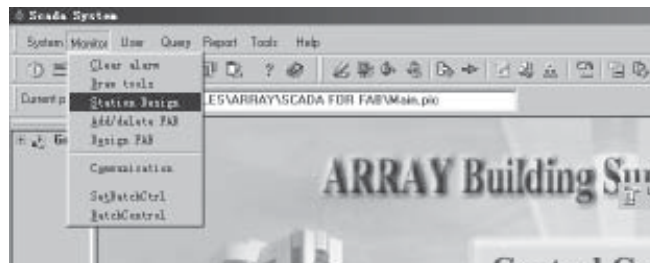








Fig. 3-2 Operation Instructions for Monitor Setup

- Clear alarm: Clear alarm information and reset and is equivalent to the quick button 
- Draw tools: Open or close the drawing interface and is equivalent to the quick button 
- Station design: Design a station and is equivalent to the quick button 
- Add/delete FAB: Setup an specified number of FAB controllers in a station and is equivalent to the quick button 
- Design FAB: Design each input/output of FAB and is equivalent to the quick button 
- Communication: Display communication data.
- Set Batch Ctrl: Set Batch Process. Being used for the lifetime-control of the ON/OFF of all the FAB output. (To complete all the actions in one step.)
- Batch Control: Execute the Batch Process.
- Design Var: Design variable and is equivalent to the quick button 

3.1.3 User (Users; Management Instructions)

Users; management instructions are for the management of the operator setup of the whole system, including User Modify Manager, User Manage, User Login and User Logout.

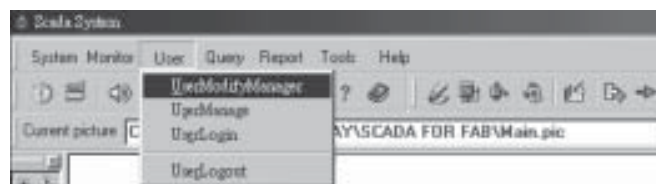


Fig. 3-3 Users instruction

- User Modify Manager: Modify the name and password of the manager. The default name is Manager and the default password is;°0001;±
- User Manage: Add normal users after the login of the system manager.
- User Login: Users use this instruction to login SCADA system.
- User Logout: Users use this instruction to logout SCADA system.

3.1.4 Query (Query instructions of the System)

In SCADA system, the instructions may be used to query the history records of all measuring values, curve diagrams and so on.

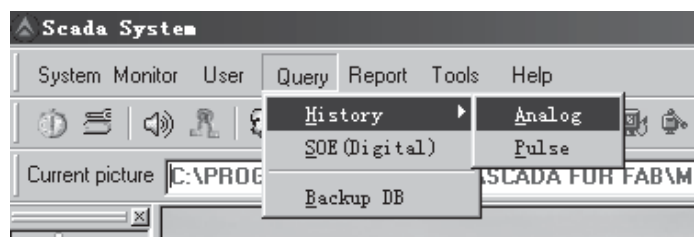


Fig. 3-4 Query instruction

History: Show the history data of remote measurement signal.

SOE: Show all the history data of the switch state.

Backup DB: Backup the database.

3.1.5 Report

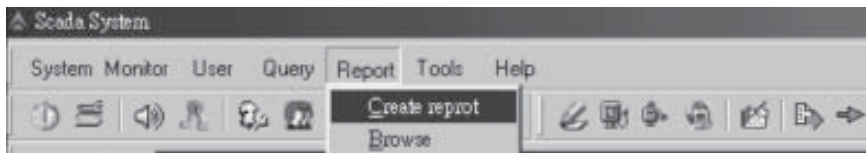


Fig. 3-5

Create Report: Start a new report.

Browse: Browse the report.

3.1.6 Tools

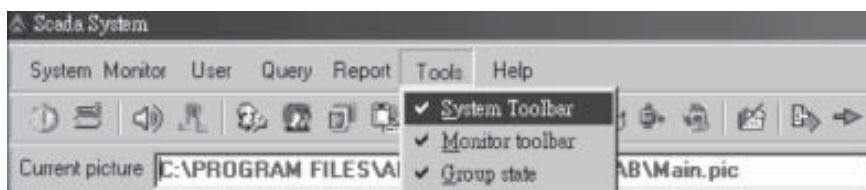


Fig. 3-6 Tools instruction

System Toolbar: Open/Close the System Toolbar.

Monitor Toolbar: Open/Close the Monitor Toolbar.

Group state: The state of the group.

3.1.7 Help

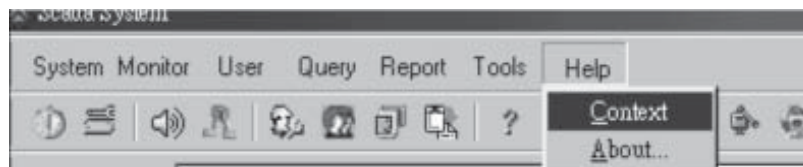



Fig. 3-7 Help instruction

Context: The operation context about SCADA.

About: Brief introduction to SCADA.

3.2 Operation Instructions and Quick Buttons in Drawing Interface

Starting SCADA system, the monitor interface will be displayed first. Users needs to login to enter the system, and clicks Monitor/Draw Tools or the icon  to enter the drawing interface. The drawing interface is mainly used to edit the site control diagram, connect the site material objects in different control field and assign physical content to them.

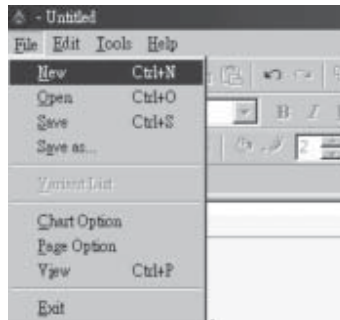



Fig. 3-8 File instruction

3.2.1 File (Files management)

New: Open a new drawing page, same as button  or clicking Ctrl+N.

Open: Open an existing drawing page, same as button  or clicking Ctrl+O.

Save: Save the edited drawing page, same as button  and clicking Ctrl+S. The default saving directory is .\SCADA FOR FAB.

Notes: Please do not change the saving directory randomly. For the file to be invoked by the system successfully, the file must be saved in this directory.

Save as: Change the directory of the existing edited page and save it.

View: View the edited drawing diagrams.

Exit. Exit the drawing interface.

3.2.2 Edit

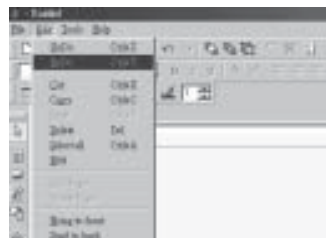


Fig. 3-9 Edit instruction

Undo: Undo the editing contents of the pre-step.

Redo: Clear the undo.

Cut: Cut the selected contents.

Copy: Copy the selected contents.

Paste: Paste the copied or cut contents.

Delete: Delete the selected contents.

Select all: Select the contents of the whole page.

Bring to front: Move to the upper layer.

Send to back: Move to the lower layer.

3.2.3 Tools

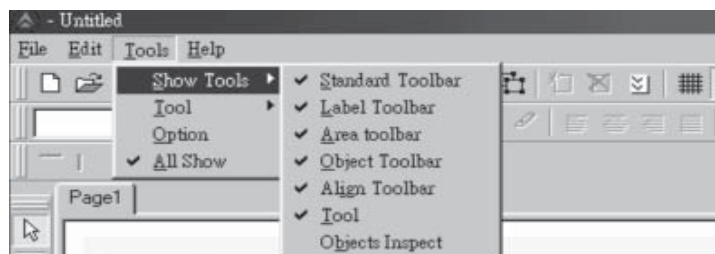


Fig. 3-10 Show tools instruction

Show Tools: Open/Close toolbars.

Tool: Select the tools.

All show: Open all toolbars.

3.2.4 Help

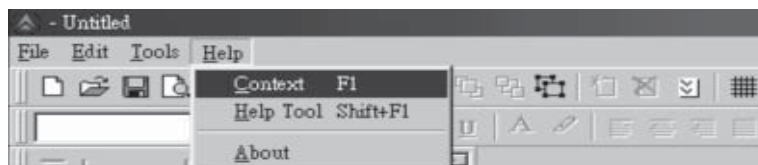


Fig. 3-11 Help instruction

Context: The context of help.

Help Tool: The Help Tools.

About: Introduction about SCADA versions.

Chapter 4 Build a Supervisory Control System

In previous chapters we introduce the FAB-SCADA System Software which is an industrial software using FAB intelligent controllers as the field control unit. On the basis of FAB-SCADA system software, users may build a supervisory control system from PC to FAB according to specific field environment and control requirements.

To build a complete control system, a station has to be designed first, then necessary FAB intelligent controllers will be setup. Then control input/output signals relevant to each input/output port and relevant field flow diagram will be setup. Corresponding the system diagram to the field control port one by one, thus the system control can be realized. In order to realize the above procedures, FAB-SCADA software provides with relevant operation instructions, which will be introduced in detail in the following.


For example, we need to build a control system over residential quarters. It has 100 households, each of them needs a FAB intelligent controller. Each household uses a FAB as the field controller for the theft monitor, gas leakage monitor, room illumination monitor, air-conditioner control, exhaust fan, door and etc. In the central control room, a PC is setup for real-time control of all the FABs and the state of all the households. If there is monitored situation happening in a household, FAB will alarm automatically and send the recorded emergency call to any pre-set telephone number.

We can select the networking methods of Scheme 1, communicating via 485 buses, to complete real time control in this example.

4.1 Station design

Explanations: Generally speaking, a station is formed by a PC and FABs (1~255). The PC is for the man-machine dialogue, and carrying out the real time control over FABs local or remote via RS485 or telephone line connecting by MODEM to realize the real time control over all kinds of input/output equipments.

The operations of designing a new system is as follows:(You should login first)

1. Click;°Station Design;±under instruction menu ;°Monitor;±or click the tool icon 

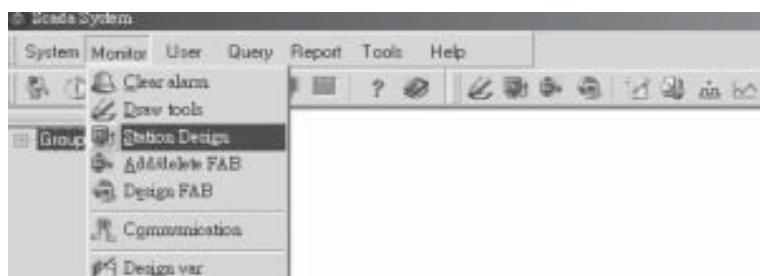


Fig. 4-1 Monitor Instruction Menu

2. A station designing dialogue frame will automatically appear in the system, as show in Fig. 4-2.



Fig. 4-2 Station Designing Dialogue Frame

3. If you design a station for the first time, please click ;°Append;±in the right of Fig. 4-2 to enter station setup dialogue frame as shown in Fig.4-3. If your system already has a designed station, only click ;°Modify” to modify the existing station and enter station setup dialogue frame. Or click;°Delete;±first to delete the existing station and then click ;°Append;± to enter station setup design frame.

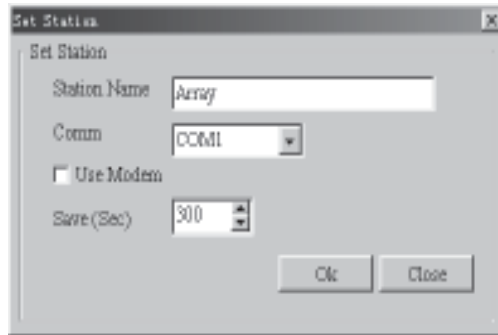


Fig. 4-3 Station Setup Dialogue Frame

The field contents are as follows:

| Field Name | Content | Remarks |
|--------------|------------------------------|------------------------------|
| Station Name | Name of the Station | Sun Garden #1 in the example |
| Com | COM Series Connection Port | COM1 in the example |
| Use Modem | Use Modem or Not | Not Selecting in the example |
| Save(Sec) | Interval of Resources Saving | Preset value is 300 second |

4. In the dialogue frame as shown in Fig. 4-3, the Station Name and Comm must be entered and cannot be use repeatedly. When editing is completed, click OK and finish the setup of the Station Name and the Communcation Methods, then the tableau as shown in Fig. 4-4 will appear.

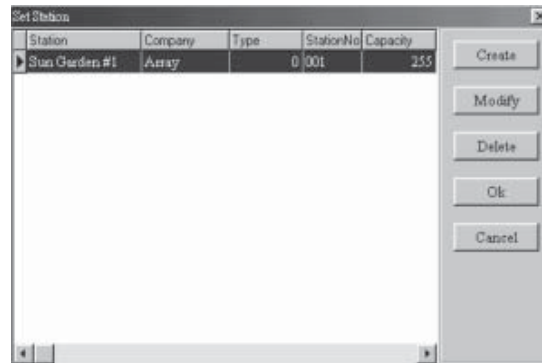



Fig. 4-4 Dialogue Frame for Definition and Modification of the Station name and Driving Methods

5. Select **OK** and finish the station design, and the Station Name being **Station** and Comm being **COM2**. These does not apply if **Append** is selected. If **Modify** is selected, you can modify the station name. And if **Delete** is select, the existing station is deleted.

Notes: The FABs in a COM are considered to be a station. When designing a station, the COMs related to a station should be identical. For upgrade of a system running, with the expansion or reduction of the system management and the changes of the communication methods, stations can be added or deleted using Add/Delete.

4.2 Add/Delete FAB

There are 100 FAB control units in this example. We need to add FAB controller in the same station you build one by one. The operation is as follows:

1. Click **Add/delete FAB** under **Monitor** instruction menu, or click the icon  in the toolbars, the dialogue frame as shown in Fig. 4-6 will appear.

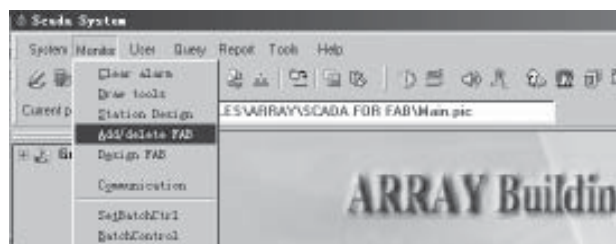


Fig. 4-5 Operation Instructions of Add/Delete FAB

2. In the dialogue frame as shown in Fig. 4-6, the Station Name are displayed at the left-up conner. If you click **Add**, you can add a FAB controller in the station. If you click **Delete**, you can delete a FAB controller in the station. If you click **Modify**, you can modify the selected FAB.



Fig. 4-6 Adding or Modifying FABs Dialogue Frame 1

2.1 Click 'Add' and enter the next dialogue frame as in Fig. 4-7. Enter the Controller Name, Controller Address and Controller Type.

Notes: The Controller Addresses should be unique and be consistent with the FAB address. For example, for the first FAB, the name is FAB1, the Address is 0, the Type is 20-point type and the Mark is 1. And other parameter cannot be modified at the same time.

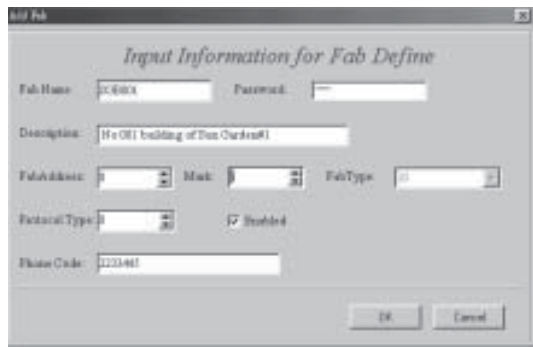


Fig. 4-7 Adding or Modifying FABs Dialogue Frame 2

Field meaning:

| Field Name | Content | Remarks |
|---------------|---|---------------------------------|
| FabName | The Name of the Controller | SGB001 |
| Description | Description and Explanation | No 001 building of Sun Garden#1 |
| Mark | Using Marks (0-Closing 1-Opening) | |
| Fabaddress | The Address of the Controller (Be Agreed with the FAB Address) | |
| FabType | The Type of the Controller (10-point, 20-point) | |
| Analog | Tele-metering Data | |
| Digital | Tele-communicating Data | |
| Pulse | Tele-pulsating Data | |
| Protocol Type | The Type of the Protocol | No Considering |
| Enabled | Being Used | |
| Phone Code | The Telephone Number | |

2.2 Click **OK** to end the set of the FAB1 as in Fig. 4-8.

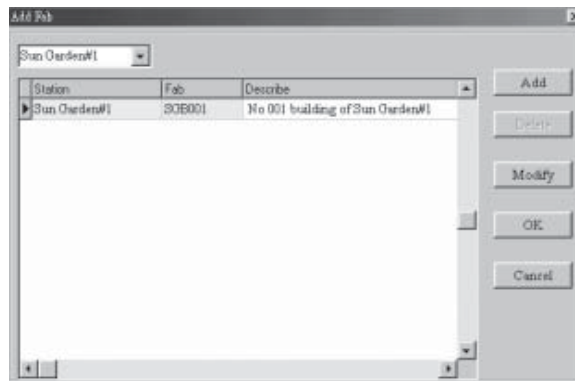


Fig. 4-8 The Controllers Adding Competition Dialogue Frame

2.3 Repeat the above operations and add 100 controllers into the Station Sun Garden #1 one by one as in Fig. 4-9.

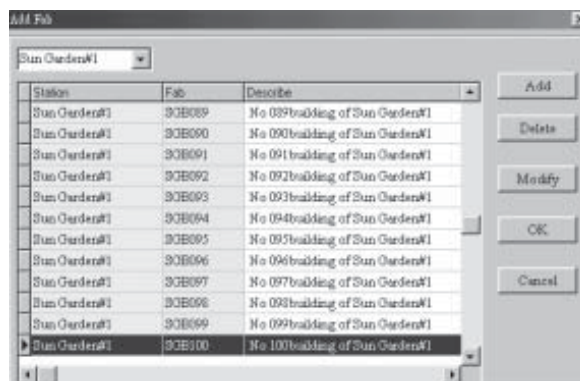


Fig. 4-9 Completing the Add of 100 Controllers

4.3 Define the FAB I/O Port

After building the station and adding corresponding FABs, we need to define the I/O ports of the controllers to make them be consistent with the input signals in the environment and the field equipments. In the system, the default values of I/O ports are: AnalogPoint~AnalogPoint10. And they are inconvenient in actual use. It is thenb needed to modify the definition of the FAB I/O port. The detailed operations are as follows:


Step 1. Click **Monitor** **Design FAB** or the fast icon  by the mouse, the system will display the **FAB Definition** interface as in Fig. 4-10.



Fig. 4-10 FAB Defining Dialogue Frame

There are three types of the I/O Port signals:

- (1). Tele-metering: the input emulating value of the FABs.
- (2). Tele-communicating: the ON/OFF state of the FABs.
- (3). Tele-pulsating: the accumulated value of the pulsating value of the FABs.

The setup of the three I/O types are determined according to the the demands of the users. The dialogue frames for the setup of the three types signals: tele-communicating, tele-metering, tele-pulsating are as follows.

A. Digital Points properties defining dialogue frame

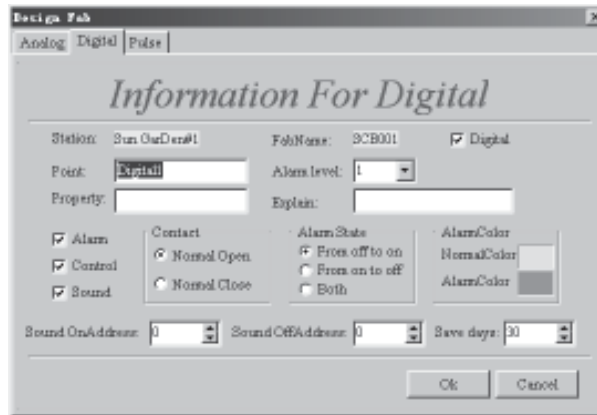


Fig. 4-10.1 Tele-communicating Point Properties Defining Dialogue Frame

The content of each rail are as follows:

| Rail Name | Content | Remarks |
|----------------|------------------------|--------------------|
| Point | Defining the I/O Port | |
| Alarm Level | The Level of the Alarm | |
| Property | Property | |
| Explain | Explanation | |
| Alarm | Alarm or Not | Not |
| Control | Controllable or Not | |
| Sound | Sound Alarm or Not | |
| Normal Open | Always Being Open | Select one of them |
| Normal Close | Always Being Closed | |
| From off to on | From Closed to Open | Select one of them |
| From on to off | From Open to Closed | |
| Both | Select the Both States | |
| Normal Color | The Normal Color | |
| Alarm Color | The Alarming Color | |

Explanations:

- (1). Alarming Level: the alarming system can be set into 6 levels. Level 1 is the highest level. The alarming level for each port can be set according to the urgency of the alarm.
- (2). Controllable or Not Controllable: If the port is set to be controllable, then the PC can control its ON/OFF directly.
- (3). Sound Alarm Enable and Disable: The alarming message is pre-recorded. And the addressed of the alarming message are set by $i^{\circ}\text{Sound On Address}_{i\pm}$ and $i^{\circ}\text{Sound Off Address}_{i\pm}$

B. Analog ports properties defining dialogue frame

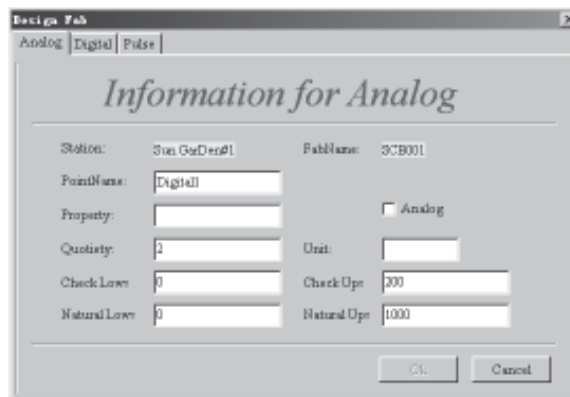


Fig. 4-10.2 Tele-metering Point Properties Defining Dialogue Frame

The meanings of each rail are as follows:

| Rail Name | Content | Remarks |
|-------------|--------------------------|---------|
| Point | Defining the I/O Port | |
| Sum | Accumulating the Input | |
| fSimulation | Setting as tele-metering | |
| Property | Property | |
| Quotiety | Proportion coefficient | |
| Unit | Unit | |
| Check low | The Lowest Limit | |
| Check up | The Uppest Limit | |
| Natural low | The Lower Limit | |
| Natural up | The Upper Limit | |

C. Pulse ports properties defining dialogue frame

The tele-pulsating ports properties defining dialogue frame is the same as the tele-metering ports properties defining dialogue frame.

Step 2. Click the name of the station to be controlled and the name of the port to be detected, the resources, signals and corresponding message of the FABs at the station will be displayed automatically. For example, in Interface 4-10, click Station Name ;°Sun Garden #1;± and FAB Name ;°SGB001;± the interface as in Fig. 4-11 will be displayed.

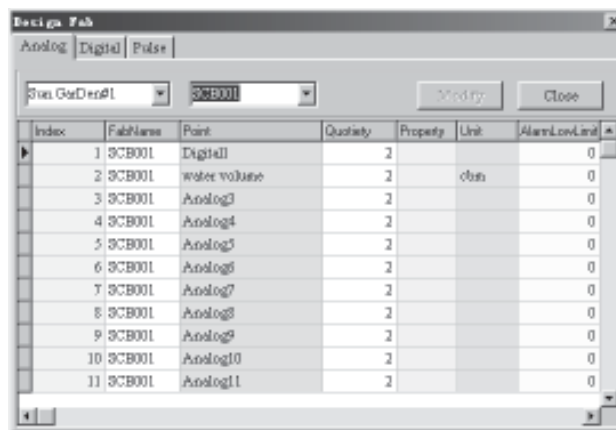


Fig. 4-11 Defining the FAB I/O Ports

In the tabulate, the corresponding resources of the 20 I/O ports (12I/8O) of SGB001, 1~20 are displayed. Select the item to be modified and click ;°Modify;±, the following dialogue frame in Fig. 4-12 will be displayed.

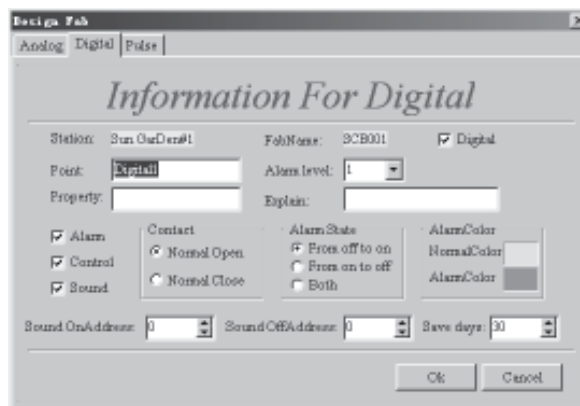


Fig. 4-12 Defining the Port I1 of FAB SGB001

In this example, Port I1 of FAB SGB001 is a tele-communicating port:

Point Name: Infrared Detector,

Alarm Level: 1 (The alarming levels of the systems may be different from each other. And the highest level is 1.),

The point is an alarmport, and is non-controllable and sound alarming,

The contactor is normally open,

The alarming state is from OFF to ON

Normal Color is green, (It may be set by clicking the rectangle on the left of the Normal Color.)

Alarm Color is red.

Step 3. Define Port I2 of FAB SGB001 in the same methods as the above in Fig. 4-13.

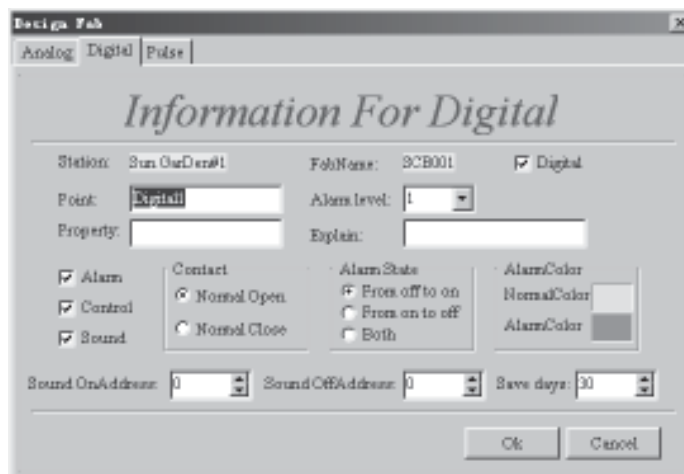


Fig. 4-13 Defining the Port I2 of FAB SGB001

Port I2 of FAB SGB001 is a tele-communicating port,
 The Point Name is gas detector,
 The Alarming level is 1. (The alarming levels are set into 6 levels by the system and the highest level is 1.)
 The point is a alarming port,
 The port is controllable and sound alarming.
 The contactor is normally open,
 The alarm state is from OFF to ON
 The normal color is green,
 The alarm color is red.

Step 4. Set Port I3 as the 'Light detector' by the same methods as above.

Step 5. Set Port I4, Port I5 and Port I6 as 'Water volume', 'Gas volume', 'Electricity volume' respectively as in Fig. 4-14.



Fig. 4-14 Defining the Tele-metering Port

Step 6. Define Port I7~I12 as spare ports and not being used for the time being.

Step 7. Define Port O1~O5 as Fan Lamp Door lock, Cooking pot, Air conditioner, respectively. And they are all tele-communicating ports as in Fig. 4-15.

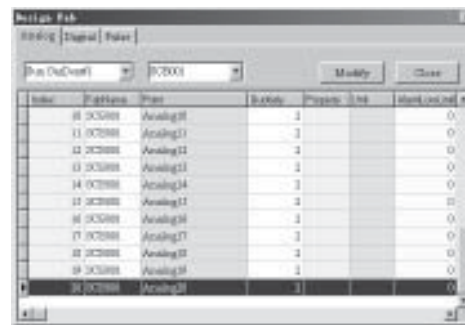



Fig. 4-15 Defining O1,O2,O3,O4,O5

Step 8. Define Port I8~2O(O6~O8) as spare ports. And they are not used for the time being.

In the above, the definition of all the input and output ports of FAB SGB001 are completed. Then define all the input and output ports of FAB SGB002 by the same methods as above. The only difference is that the ports number of FAB SGB002 are 21~40. Using the same procedure as above, complete the definition of the input and output ports of all 100 FABs.

Note: The sound file name of the sound alarm is sound.wav. In the example, for the tele-communicating port 1, the address of Sound On Address is 0 and the address of Sound Off Address is 12. For tele-communicating port 2, the address of Sound On Address is 1 and the address of Sound Off Address is 13. By recording the different files, voice prompting function can have different messages .

4.4 Drawing Monitoring Interface

SCADA System provides with some drawing editing function and allows the users to edit all kinds of monitoring diagrams according to the actual situations to illustrate a completed system. Click the "Monitor Set" "Drawing Tools" in the main function listing or click the fast icon  by using mouse. The following drawing interface as in Fig. 4-16 will automatically be displayed in the system.

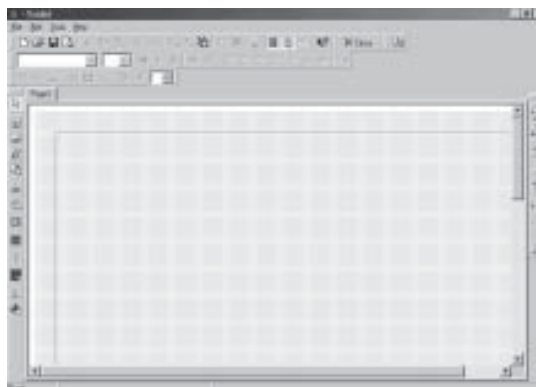


Fig. 4-16 Drawing Interface

4.4.1 Operation Instruments In Drawing Interface

There are four main pull-down menus: File, Edit, Tools and Help.

File is mainly used for files management, such as New, Open, Save and Page Set as in Fig. 4-17.

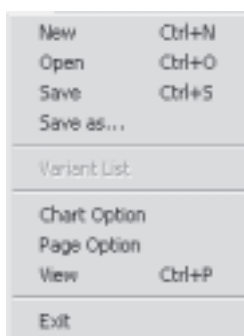


Fig. 4-17 File Menu

Edit is mainly used for the function of cutting, copying, deleting of the drawings as in Fig. 4-18.

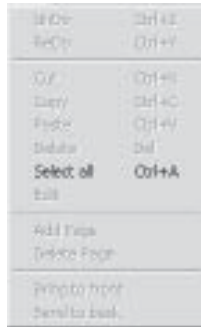


Fig. 4-18; Edit Menu

iTools has four options and the first two options have their own sub-function listing. And their main function is for the open and close of all other tool bars as in Fig. 4-19.

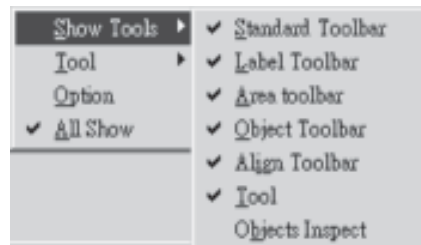


Fig. 4-19; iTools Menu

iHelp is used to open the help files as in Fig. 4-20.

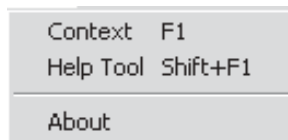


















Fig. 4-20; iHelp Menu

4.4.2 Drawing Tools














1. Basic tools: mainly used for the edit of the text.

| | | |
|------------|------------------------|----------------------------------|
| BasicTools | | |
| New | Set as the upper layer | Return to the pre-step operation |
| Open | Add a Page | Help |
| Save | Delete a Page | Set as the Bottom Layer |
| Preview | Select All | Close the Drawing Interface |
| Cut | Page Set | Cancel the Pre-step operation |
| Copy | Paste | Show the Grid |












2. Text property Tools: mainly used for the text edit in the procedure drawing.

| | | |
|--|---|---|
| Text Property Tools  | | |
| Font Set  | Size Set  | Gothic Set  |
| Italic Set  | Underline Set  | Font Color Set  |
| Paragraph In the Middle  | Right-justify  | Align In the Middle  |
| Right-justify  | Halve the Interval  | Paragraph on the Top of the Page  |
| High Metering Properties Set  | Paragraph at the bottom of the Page  | Horizontal and Vertical Paragraph Switching  |

3. Main Drawing Tools: used for the building of the building frame, hot area definition and FAB definition.

| | |
|--|--|
| Main Drawing Tool  | |
| Design text and Tele-metering Point  | Draw Horizontal and Vertical Line  |
| Insert Basic Frame (Rectangle, ellipse and so on.)  | Design Tele-Communicating Point  |
| Insert Spot-Diagram  | Design hot area  |
| Insert OLE  | Vectorgraph  |
| Design Gif  | Design FAB  |
| Design Chart  | Instrument  |

4. Justifying Tools: Used for arranging the texts and the diagrams in the files in specified order.

| | |
|--|---|
| Justifying Tool Bar  | |
| Left Justify  | Right Justify  |
| Halve intervals levelly  | Halve intervals vertically  |
| Align in the middle vertically  | Align in the middle levelly  |
| Bottom Justify  | Top Justify  |
| In the middle levelly  | In the middle vertically  |

5. Grids Setting Tools: Used for the frame lines and the colors of the diagrams setting.

| | | | |
|---|--|-----------------------|--|
| Internet Setting Tools | | | |
| Top line rim | | Bottom line rim | |
| Right line rim | | Left line rim | |
| Whole line rim | | Cancel line rim | |
| Set drawing pen color | | Set drawing pen width | |
| Set the color degree of the form background | | | |

4.4.3 Drawing the Monitoring Diagram

4.4.3.1 Page Setting

This function is mainly used for the page size and background color setting, etc. Select *File* | *Page Option*, or double click the page zone. The page setting dialogue frame will be displayed as in Fig. 4-20.1.

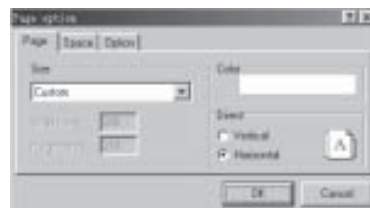


Fig. 4-20.1 Page-setting Dialogue Frame

Select the Page Number: In the tabulate, select or self-define the size of the page. Double click the rectangle zone in the Color to set the background color of the page as in Fig. 4-21. And the page can be set in long or cross direction.

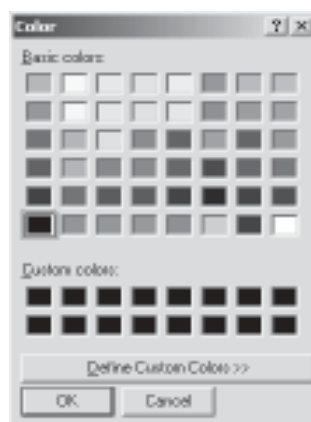


Fig. 4-21 Color Set


Select the Space Page to set the blank space at the margin. If you select "Enable", then the blank space will be effective and at the same time the size of the blank space zone can be modified as in Fig. 4-22.




Fig. 4-22 Set the Size of the Blank Space

4.4.3.2 Draw the Monitor Diagram

In this system, we provide with basic drawing tools, such as inserting basic objects pictures, inserting BMP picture files, inserting animated pictures, invoking the information and resources of the controllers, drawing the basic picture frame and inserting the special objects pictures.

Step 1: Insert basic objects  and BMP pictures:

Previously we mentioned that we provide with some components pictures frequently used in the automation control system, such as valve, water pump, electric motor and so on for the users to invoke directly and can be invoked from user-made BMP picture files. The detailed operations are as follows.

1. Click the button  and move the mouse to the drawing interface, the dialogue block as in Fig. 4-28 will be displayed.

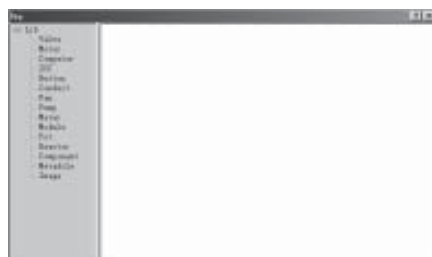


Fig. 4-23 Set the Background Diagram of the Page

2. According to the user demands, click the needed component picture in the following pictures. For example, click Valve, the valves of all shapes will then be appearing.



Fig. 4-24 Set the Background Picture of the Page

Similarly, the user may select the other diagrams and here we will omit the detailed procedure. When the user selects the Image option as in Fig. 4-30, the user may insert the BMP picture files.



Fig. 4-25 Inserting BMP Picture Files

Select the Load button in the above figure, the system will prompt the files-opening dialogue frame as in Fig. 4-26. Select and open the home2.bmp and press;°OK;±thus the home2.bmp will be added to the diagram editing. Also you can move and zoom in and out the having inserted pictures.



Fig. 4-26 Files Opening Dialogue Frame

After inserting selected picture, the user may obtain the ideal visual effects by zooming in/out and moving the position. Simultaneously, the adjusting tools said previously may also adjust their position properly. And they can be set to different colors.

Step 2. Insert Basic Shape Form


1. Click the button  and move the mouse to the drawing interface, and the following dialogue frame as in Fig. 4-27 will be shown in the system as below.




Fig. 4-27 Insert Some Basic Shape Form

2. Click any basic shape form you needed, then the shape form will be easily inserted into your drawing interface. The system provides with 8 types of basic shape forms, including the block flow diagram, the circumference diagram, the block flow with round corners and the cylinder diagram, etc.

Step 3. Insert Animated Pictures

This function is mainly used to dynamically show the state of the input and output of the equipments. For example, the exhausting fan is working and so on. The user needs to formulate some animated pictures of the exhausting fan running and save the pictures in the form of animated pictures. For example, to save the animated pictures file as fan.gif.

1. Click the button  and move the mouse to the drawing interface, then the dialogue frame as in Fig. 4-28 will be shown in the system as below.

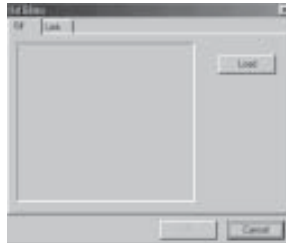


Fig. 4-28 Insert Animated Picture 1

2. Select and click Load, the system will prompt the path to save the file fan.gif, Click the file name and confirm, then the files will be inserted.

3. Select and click Link, the system will display the dialogue frame as in Fig. 4-30. Select the FAB I/O Port of the working station that actually corresponds to the exhausting fan and click the Confirm button. Thus the animated picture inserting and inter-connecting is completed. When the system is running normally, under the situation conditions satisfied and the exhausting fan in the control site is working, its state will be transferred in realtime to the monitoring system and will be shown in the designed animated pictures. By this function, the user may observe the running state of any equipment graphically.

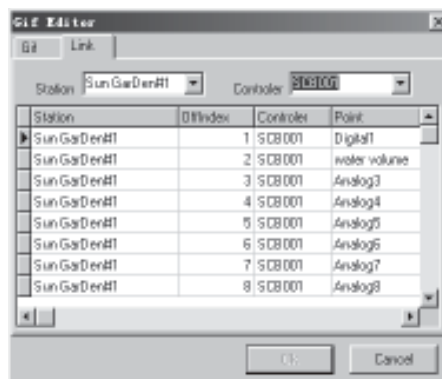



Fig. 4-30 Connect the Input and Output of Animated Picture and FAB

Step 4. Insert FAB Controllers

The system provides with the function to insert FAB controller directly with the resources of the input and output ports and directly show in the running diagram. If an input/output port is a switch value, the ON/OFF state can be seen in the monitoring interface. If an input/output port is an analogue or a pulse value, the value of the analogue or pulse can be shown in realtime in the monitoring interface. Before running the function, the user needs to save the pictures of FAB controllers under the path .\SCADA.

1. Select and click the button  and move the mouse to the drawing interface, the dialogue frame as in Fig. 4-31 will be shown in the system. Then select the corresponding controller.

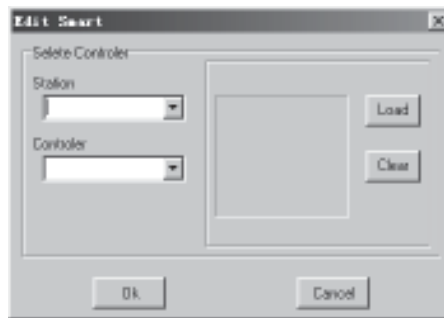


Fig. 4-31 Insert FAB Controllers

2. Write down the picture of the corresponding FAB controller as in Fig. 4-32 and the click the \pm Confirm button. Thus the inserting FAB controller is completed.

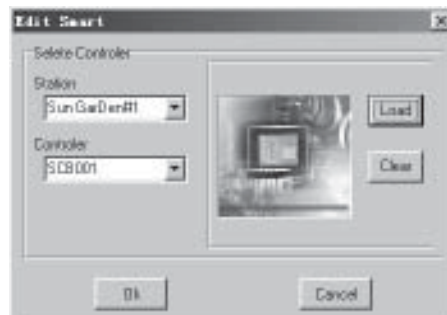



Fig. 4-32 Interface of Inserting Controllers

Step 5. Insert OLE Objects

The system provides with direct access function of all measuring instruments pictures. This function is mainly used for the access of the tele-metering signals.

1. Select and click  and then move the mouse to the drawing interface, and the dialogue frame as in Fig. 4-33 will be shown in the system.
2. Select the corresponding icon button of the needed object and connect to the corresponding tele-metering signal port. Then the port will be monitored in realtime, such as manometer, thermometer, level gauge and so on.

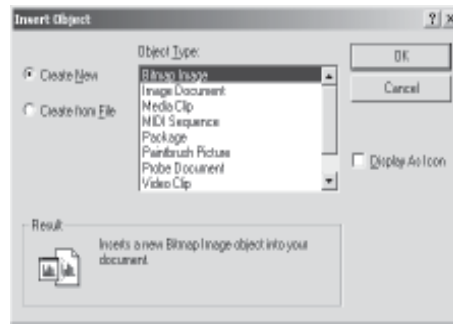



Fig. 4-33 Insert OLE Objects

Step 6. Insert Chart Pictures

This function is mainly used for the direct access of tele-metering signals and provides with the block flow diagram, the circumference diagram, the block flow with round corners, the cylinder diagram and so on. And it makes the monitor of the tele-metering signals be more straight forward and clear.

1. Select and click the button  and then move the mouse to the drawing interface, and the dialogue frame as in Fig. 4-34 will be shown in the system.

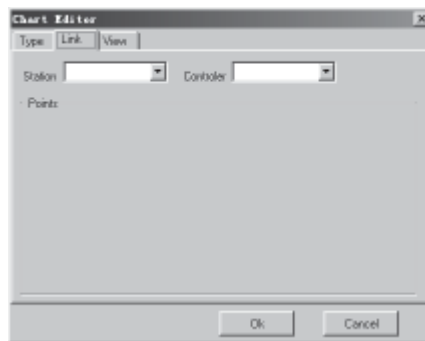


Fig. 4-34 Insert Chart Diagram and Form

2. Select the Input port of the FAB needed to define. Click Type and select the needed shape form as in Fig. 4-35.

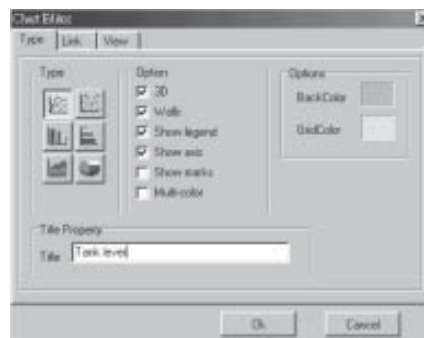


Fig. 4-35 Select the Diagram

3. Press the **Confirm** button to confirm and the setup is completed. During the normal execution of the system, the diagram will be shown as the analogue value received from the site.

Step 7. Define Hot Area

As for any complex monitoring system, we cannot monitor by one diagram and we need many diagrams for monitoring. We will need to build lines between the pictures to realize the related switching between the graphics.

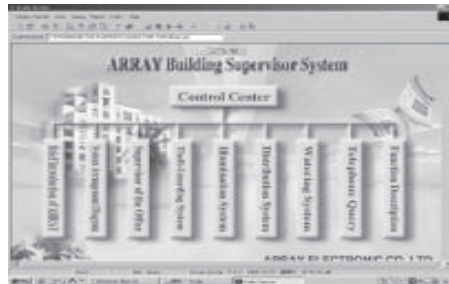



Fig. 4-36 Define the Hot Area

As in Fig. 4-36 the main monitoring diagram, there are **Brief Introduction of Array**, **System Arrangement Diagram** and so on. Click **Supervisor of the Office**, and then the corresponding household monitoring diagram as in Fig. 4-37 will be shown in the system. This link is called the Hot Area.



Fig. 4-37 Family Monitoring Diagram

The methods of hot area defining is as follows:

1. Click the fast icon of the hot area  , move the mouse to the position to put the hot area, then move it together with the rectangle appearing and click the position where the rectangle appearing, then the dialogue frame as in Fig. 4-38 will be popped out. If you want to modify the defined hot area, just double click the hot area in the drawing diagram and the hot area definition dialogue frame as in Fig. 4-38 will be opened.

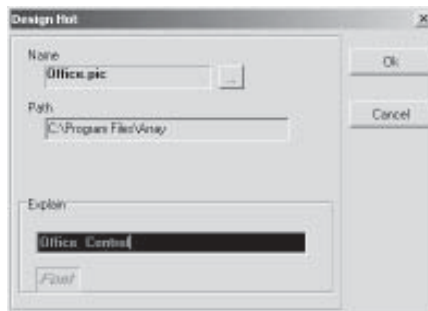


Fig. 4-38 Define Hot Area

Name: Select the Name files and click the rectangle zone on the right of Picture, and the file open dialogue block as in Fig. 4-39 will be popped out. Select the directory path (the same directory as the Scada). If the °Office.pic± file exists, select the picture file and then the diagram corresponding to the Hot Area household Monitor is set as the picture °Office.pic±

(2) **Explain:** the explanation of the picture files. Input a paragraph of abstract explanation in the editing diagram on the left of Explain, and the words will be displayed in the picture diagram. If no input, the diagram will display the background contents in the transparent manner thus to realize the hot area definition of the background. For example, all the hot areas on the main diagram are produced on the same background diagram.

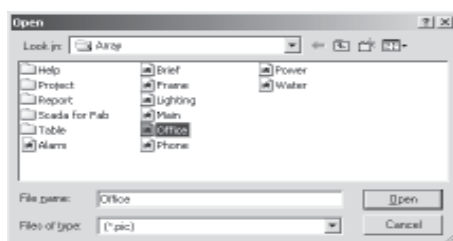


Fig. 4-39 Select the Picture Files

(3) **Font:** Set the font of the explanation word. Double click the left zone of Font, the font setting dialogue frame as in Fig. 4-40 will pop out. And the shape, size, color and so on can be set in the dialogue block.

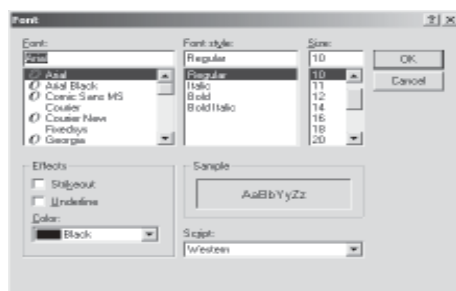


Fig. 4-40 Set Font Properties

2. Set Hot Area Background. Click the fast icon  of background setup, the dialogue block as in Fig. 4-41 of color will pop out. And in the diagram, the background color can be set.

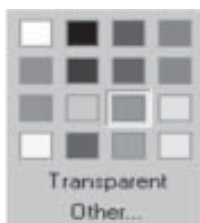



Fig. 4-41 Set the Background of the Hot Area

Step 8. Setup the Input and Output

After editing a monitoring diagram, it is needed to show all the information of all the input and output ports of the FAB in the diagram to achieve monitoring action. As for different signal port such as tele-communicating, tele-metering and tele-pulsating, we have different setup methods and the details are as follows:

1. Setup the Tele-communicating Point

Select and click the fast button , then a small green check (meaning the monitoring point) will appear in the diagram and at the same time the system will prompt the dialogue frame as in Fig. 4-42. In the Link page click the station-listing frame and select the station named 'Sun Garden#1' and at the same time list all the FAB controllers of the station in the controller-listing frame. Then select the first controller 'SGB001' and select the 'Infrared detector' (when the FAB controller was defined). All the I/O ports of the FAB controller will be shown in a list. Thus the definition of a tele-communicating point is done. During the normal operation of the system, the state of the I1 of the SGB001 will be shown by the green check.

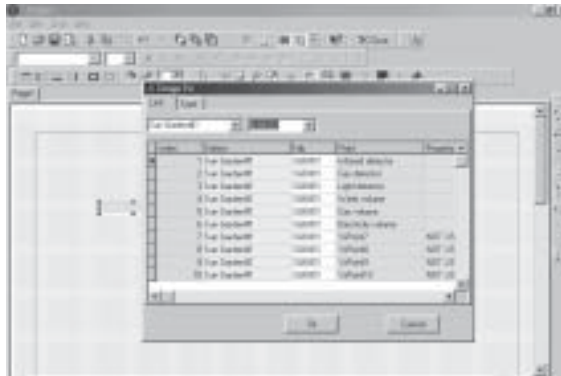



Fig. 4-42 Tele-communicating Port Setuping Dialogue Frame

2. Setup the Tele-metering Point and the Text Frame

Select and click the button  move the mouse to the corresponding position. The following dialogue in Fig. 4-43 will appear.

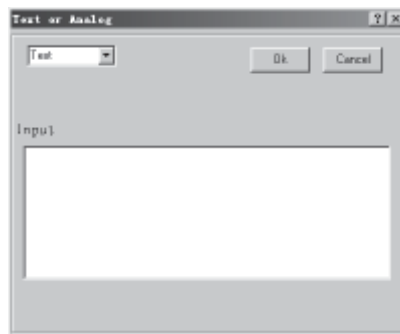


Fig. 4-43 Tele-communicating Point and Text Frame Setuping Dialogue Frame 1

There are two options: Text and Analog in the pull-down menu at the upper-left corner in the diagram. Select Text, and the text can be placed. Enter the text in the Input zone and then click OK button. Then the text is placed. The text is used for the title explanatory notes and can be used for tele-communicating and tele-metering points.

Select Analog, and the tele-metering point can be placed. Select and click the Link page and then the dialogue frame of placing tele-metering point as in Fig. 4-44 will be displayed. And the two pull-down menus are used for selecting station name and the FAB controller name.

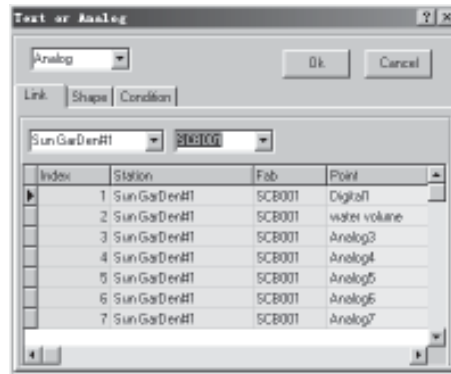


Fig. 4-44 Tele-metering Point Setup Dialogue Frame

Select 'Sun Garden #1' in the station-listing table and select 'SGB001' in the FAB controllers. Thus the listing menu will show all the information of the tele-metering of SGB001. Select 'Analogpoint3' in the listing table and click OK button. Thus the placement of the tele-metering point 'Analogpoint3' and the connection of the relative resources are completed. The details are as in Fig. 4-45.




Fig. 4-45 Complete the Setup of Tele-metering Point Placement

Select and click the 'Shape' page in Fig. 4-44, and you can select the shape form of the tele-metering point unit as in Fig. 4-46.



Fig. 4-46 Select the Shape Form of the Tele-metering Point

Step 9. Insert instrument

Select and click the button  and move the mouse to the corresponding place. Then the dialogue block of setup the insert instrument as in Fig. 4-47 will be displayed by clicking the mouse.

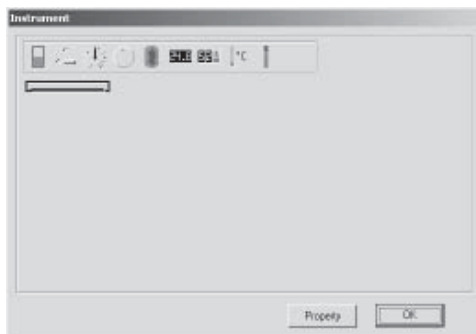



Fig. 4-47 Insert instrument

These Components are used for the display of output value, property of OPC & Theme for every component will not be temporarily

Select the first Component, then click  button

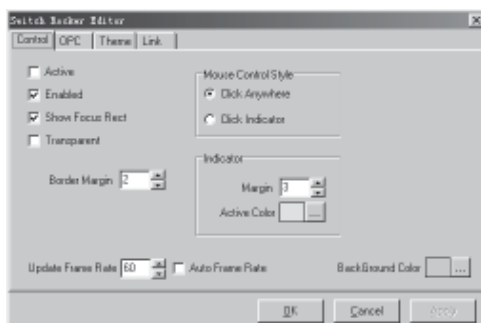



Fig. 4-48 Instrument property

1. Choose  option from Shown dialog box, specific optional functions defined as follows:

- 1). Active: Active State;
- 2). Enable: The component's is True or False;
- 3). Show Focus Rect: if choose,
- 4). Transparent: Transparent;
- 5). Border Margin: Set Border Margin;
- 6). Update Frame Rate: Set Frame size;
- 7). Auto Frame Rate: if Choose it the Frame can auto to change size;
- 8). Background color: the component background color;

Mouse control Style:

- 1). Click anywhere means click the component anywhere the property dialog will shown;
- 2). Click indicator means click the component Active indicator the property dialog will shown;

Indicator:

- 1). Margin; Active size;
- 2). Active color;

2. Select Link option:

Choose Station Controller, then Choose output to be connected with component.

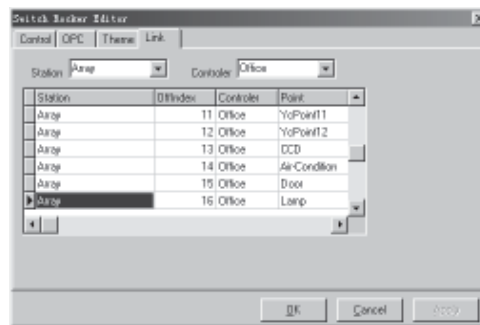


Fig. 4-49 Instrument Link

Following same as above.

4.4.3.3 Analyze the Communicating State

Click the menu 'Monitor/Communication' as in Fig. 4-50.

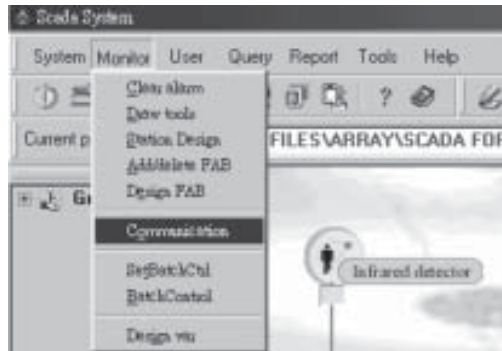


Fig. 4-50 Open the Communication with FAB

The SCADA System provides with the function of showing the binary codes of the FAB controller as in Fig. 4-51.



Fig. 4-51 Analyzing Diagram of the Communicating State

Function:

- (1). The dialogue block records the communicating time, the number of the accepting character, the length of the frame, the time of the errors and calculates the rate of error codes.
- (2). If it is needed to observe carefully the current information, just click the 'Stop' to pause.
- (3). The current resources in the files to analyze and use can be saved.
- (4). The original resources of the current frame can be printed.

Chapter 5 User Management

Considering the securities of the system, it is necessary to manage all the customers in the whole system. And only the users with authorities can enter the system to observe or modify. User Management mainly includes Modify Manager Name, Append, Delete and User Login function items as in Fig. 5.1.



Fig. 5-1 User Management

5.1 Modify Manager Name

Select "User | User Modify Manager" function item or click the fast button as in Fig. 5-2.

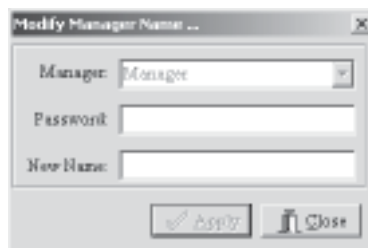


Fig. 5-2 Modify Manager Name

In Fig. 5-2, select "Manager" and enter the password "0001". Then enter the new manager name and click "OK" button. The function of modifying manager name is done. (The default manager name is "Manager" and the default password is "0001")

5.2 User Management

This function item is for manager only. It mainly includes Append, Delete and Modify Password (including the manager's password). The details are as follows in Fig. 5-3.



Fig. 5-3 User Management

5.2.1 Append

Select and click the button **Append** as in Fig. 5-4. In the interface enter the user name, password, and then confirm the password. If the user's name exists, the system will prompt to re-enter. And the password and its confirmation must be the same. Finally click the **OK** button.

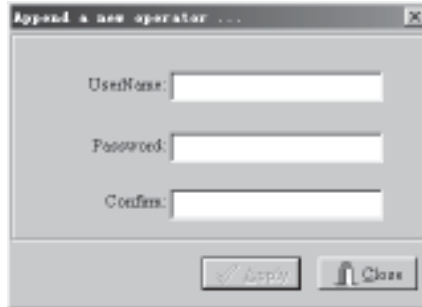


Fig. 5-4 Append

5.2.2 Delete

In Fig. 5-5, select the user's name to be deleted in the listing table and click the **Delete** button, then the prompting dialogue block as in Fig. 5-6 will be displayed to prompt you whether you really want to delete the user.



Fig. 5-5 Delete

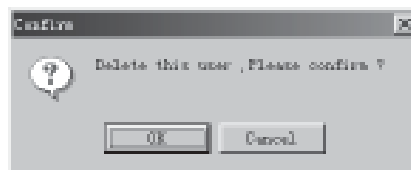


Fig. 5-6 Confirming Dialogue Frame

5.2.3 Modify Password

Click the user's name (including the manager) to be modified and then click **Modify** button as in Fig.5-7. Enter the old password and the new password, and then confirm the new password. The new passwords entered twice must be the same. Finally click **OK** button and the password is modified.



Fig. 5-7 Dialogue Frame for Modifying Password

5.2.4 Query the User Information

Select and click the button 'Advance', the dialogue block as in Fig. 5-8 will be displayed and the information of all the users will be shown in the listing table. Clicking 'Advance' again will cancel the table list shown.

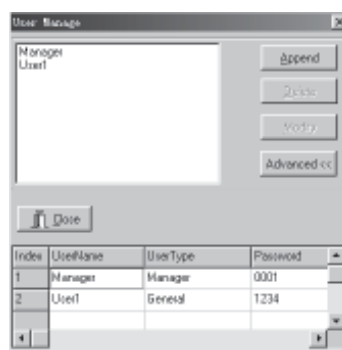


Fig. 5-8 Querying the Users' Information Dialogue Frame

5.3 User Login

When entering the system, the user is authorized with the permit of general operators and at the time he can only carry out general operations. The user must login as in Fig. 5-9 for more advanced operations. Login can only be tried for three times. If failed to login after third time, the system will exit automatically. And if the user do not do any operation after login, the system will automatically cancel the authorities of the current user and authorize the user as general operator again. If the user wants to do other operations, he must login again.

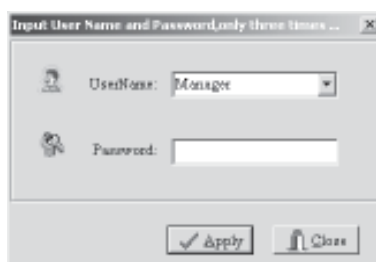


Fig. 5-9 User Login Dialogue Frame

Notes: After entering the password, 'Enter' key or the 'OK' button must be clicked!

5.4 User Logout

User will need to logout when the user is out of office and it is needed to login when other users are in office. Thus it guarantees the securities of the system.

5.5 Explanations for User Authorities

Manager (one only): Having all the functions.

General User (may be several): Not having the following function.

[Deploy] [Clear Alarm] [Draw Tools] [Station Design]

[Add/Delete Fab] [Design Fab] [BatchControl]

[UserModifyManager] [UserManage] [Backup DB] [Create Report]

User with Lowest Authorities (Non User):

[Deploy] [Clear Alarm] [Draw Tools] [Station Design]

[Add/Delete Fab] [Design Fab] [BatchControl]

[UserModifyManager] [UserManage] [Backup DB] [Create Report]

[Set FabTime]

Explanation: When the system being entering or the users logout, the system will automatically be set to the state of lowest authorities.

Chapter 6 System Configuration

The System Configuration Part includes the following function such as Set FAB Time, Print, Deploy and Exit. Click the main menu System and select the operation item from the pull-down menu, or click the fast buttons in the below to do the desired operations.

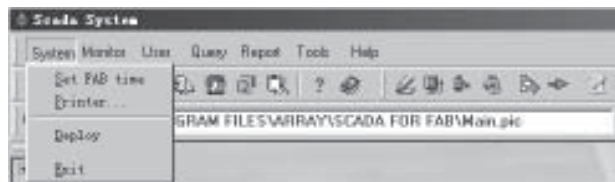


Fig. 6-1 System Configuration Instruments Selecting Menu

6.1 Set FAB Time

In the initial time of the system-building or after a period time of the system running, in order to guarantee the agreement of the times each controlling unit being on, it is needed to set time for each FAB using the upper-machine. And the detailed procedures are as follows:

1. Select and click the option System | Set FAB Time , then a dialogue frame the system prompting to carry out the setting time operation will be displayed in the interface as in Fig. 6-2.



Fig. 6-2 Dialogue Frame of Setting FAB Time

2. Select the button Yes to realize the function of time setup.

This function is used for synchronizing the time of all FAB controllers to the time of upper-machine PC so that the upper-machine PC can effectively manage all the lower-machines with FABs simultaneously.

6.2 Print

1. Select and click the options System | Print , then a dialogue block the system prompts you to carry out the print setup operation will be displayed in the interface as in Fig. 6-3.

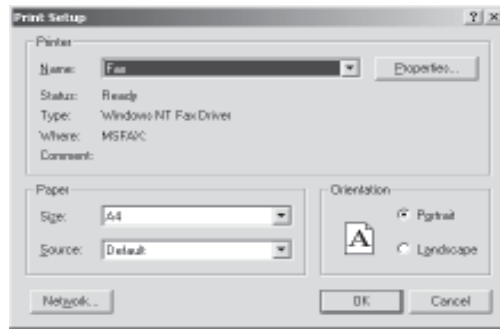



Fig. 6-3 Print Setting Dialogue Block

6.3 Deploy

After editing a monitoring system, the user will be able to package all the diagrams and relative configuration files into a project files. For example, the household-monitoring system can be package into a text file named ;°Home2.mmm;±and then be deployed to other computers. And other computers may unpack the text file and rerun all the diagrams and configuration files. The detailed operations are as follows:

Select and click ;°Deploy;±or the fast button,  then the following dialogue block as in Fig. 6-4 will be displayed in the interface.

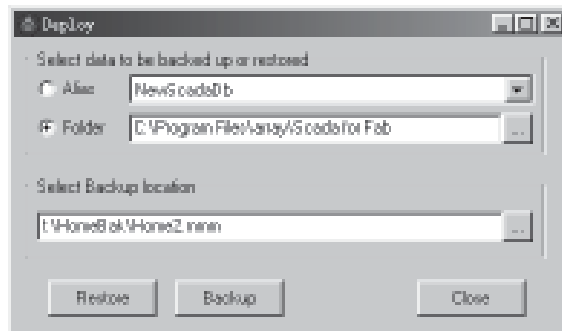



Fig. 6-4 Dialogue Block for Back-upping and rerunning

1. Back-up



(1) Select the database: In ;°Select data to be backed up or restored;±to select ;°Alias;± is to package the data base and to select the button  on the left of Folder is to select the current path of SCADA. For example, c:\Program Files\array\SCADA for FAB is to say that the SCADA is under the directory of c:\Program Files\array\SCADA for FAB.

(2) Set the saving directory and file name for the packaging files. For example: Set the path as f:\HomeBak and set the file name as Home2.mmm.

(3) Select and click Backup, the system will package and zip files.

With above procedures, it will package all the files under the directory of c:\Program Files\array\SCADA for FAB into the file f:\HomeBak\Home2.mmm.

2. Rerun

- (1) Select the path to be rerun or click the button  of Folder and set the path as: D:\Scada\F
- (2) Select the file to be packaged or click the button  Select Backup location and find the file F:\HomeBak\Home2.mmm.
- (3) Select and click Restore, and the system will enter the state of disconnecting the package.

3. After the completion of disconnecting the package, the system will prompt to re-start the SCADA system.

By the above procedures, it reruns the packaged files Home2.mmm under the directory F:\HomeBak to the directory D:\Scada

Chapter 7 Data Query

Many different type of data are produced in the process of the system operation. The SCADA for FAB software provides with the function of data querying and backup.

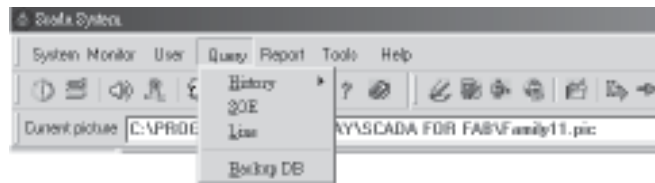


Fig. 7-1 Data Query

7.1 Data Query

1. The Tele-metering History Data Query

Select and click 'Query' > 'History' > 'Analog', the dialogue block as in Fig. 7-2 will be displayed. Select Sun Garden #1 in the station-listing table and select FAB2 in the FAB controller-listing table, then select the date. The system will list all the related data and show the history changes of the tele-metering point in the form of curve diagram.

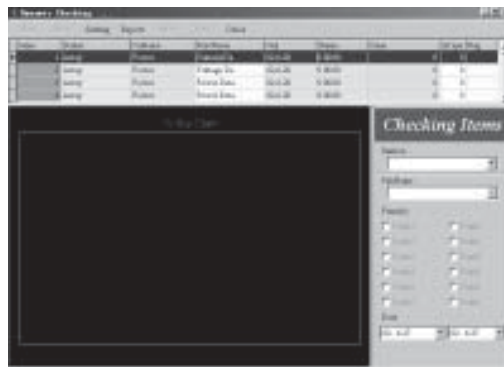



Fig. 7-2 History Data of Tele-metering Point

2. The Tele-pulsating History Data Query: It is similar as querying the tele-metering history data as in Fig. 7-3.

| Station | Fab | Date | Time | Data1 | Data2 | Data3 | Data4 | Data5 |
|---------|----------|------------|----------|-------|-------|-------|-------|-------|
| Home | Cardio_1 | 2004-05-21 | 9:00:00 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:06:07 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:20:02 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:25:00 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:30:00 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:36:00 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:40:04 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:45:08 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:50:04 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 9:55:08 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 10:00:05 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 10:05:05 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 10:10:06 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 10:15:06 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 10:20:07 | | | | | |
| Home | Cardio_1 | 2004-05-21 | 10:25:07 | | | | | |

Fig. 7-3 Tele-pulsating History Data Query

3f@TheTele-communicating Data Query

(1) Data Query: As in Fig. 7-4, select the relative querying conditions in the figure and then click the button.  The relationship between the conditions is AND . Thus the relative data will be shown in the interface.

| Index | Station | Alarm | Point | Pnt | UDate | Present | LoadChange | Level | Class | Alarm | |
|-------|---------|----------|------------|--------|----------|---------|----------------|-------|-------|-----------|----|
| 1 | Alarm | Alarm | | 004-20 | 17:54:14 | | Stop/On to Off | | 0 | 040000.01 | BF |
| 2 | Alarm | Alarm | | 004-20 | 17:54:14 | | Stop/On to Off | | 0 | 040000.01 | BF |
| 3 | Alarm | Point | Shock Data | 004-20 | 17:54:14 | | Stop/Off to On | | 0 | 040000.01 | BF |
| 4 | Alarm | Point | | 004-20 | 17:54:14 | | Stop/On to Off | | 0 | 040000.01 | BF |
| 5 | Alarm | Lighting | | 004-20 | 17:54:15 | | Stop/On to Off | | 0 | 040000.01 | BF |
| 6 | Alarm | Water | | 004-20 | 17:54:15 | | Stop/On to Off | | 0 | 040000.01 | BF |

Fig. 7-4 Tele-communicating Data Query

(2) Alarm Off: Double click the top of the record to cancel the alarm. Then click the Yes button in the dialogue block shown at the same time as in Fig. 7-5.



Fig. 7-5 Alarm Off

(3) Delete the Records of Alarm Off or Over the Save Days: Click the button Delete , and the dialogue block as in Fig. 7-6 will be displayed in the interface.

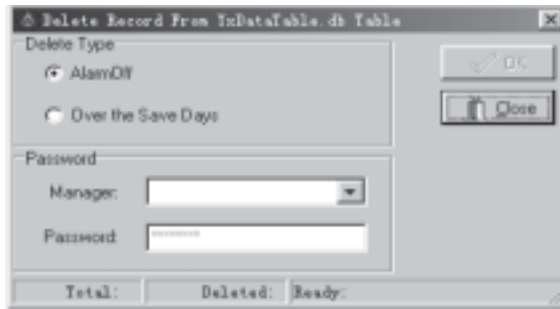


Fig. 7-6 Records Deleting Dialogue Block

Select the record type to be deleted in the dialogue block(Alarm Off /Over the Save Days),then select the user as manager and enter the password. Click the button °OK± will change into the operation state. Click the °OK± button and the system will display the confirmation dialogue block. Select °Yes± to delete the record. It will take a while if a large amount of data is to be deleted.

(4) Design the Report: Select and click the button °Design±and it will enter the diagram of designing report as in Fig. 7-7. And then the user can design various reports according to the requirement.

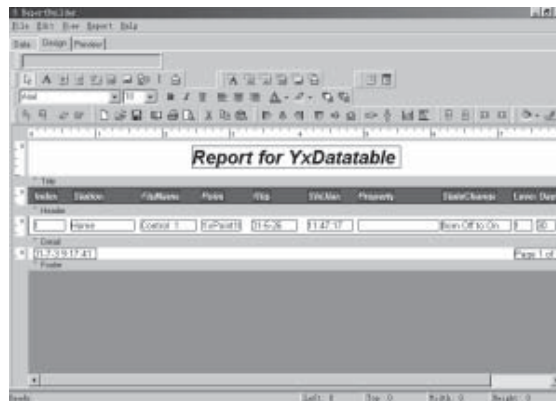



Fig. 7-7 Design the Report

Print the Report: Select and click the button °Print±.

7.2 Back-up the Data Base

After a period of the running of the SCADA System, it is needed to backup and maintain the database in order to run effectively. Click °Query±|°Backup±or the fast button , then the dialogue block as in Fig. 7-8 will be displayed.

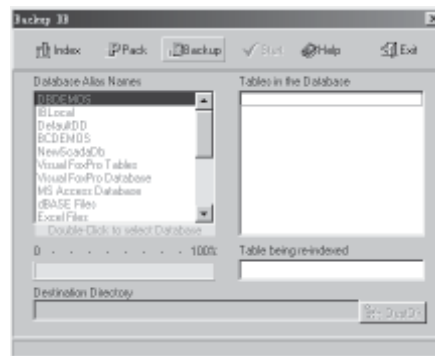


Fig. 7-8 Back-upping Dialogue Block

(1) Index the Database: Click the Index button and the listing table frame under the Database Alias Names will change from gray to black. The database name of the SCADA system is NewScadaDB. Double click the option NewScadaDB, and the listing table of Table in the Database will show all the table menus of NewScadaDB.

(2) Pack the Database: After selecting the database, it is needed to package the database. Click the button Pack. And the system will enter the packing state.

(3) Backup the Database: After packing the database, click the button Backup, the system will enter the backup state.

(4) Select the Saving Directory of the Database. Select and click the button DestDir to do the selection.

After the completion of the above procedures, click the button Start, and the system will carry out the backup of the database. After the backup, click the Exit to exit the database backup dialogue frame.

Chapter 8 Report

The Report function options include Create Report and Browse Report as in Fig. 8-1.



Fig. 8-1 Report

8.1 Create Report

Select the function option 'Report' or 'Create Report' or click the fast button , then the designing interface as in Fig. 8-2 will be displayed.

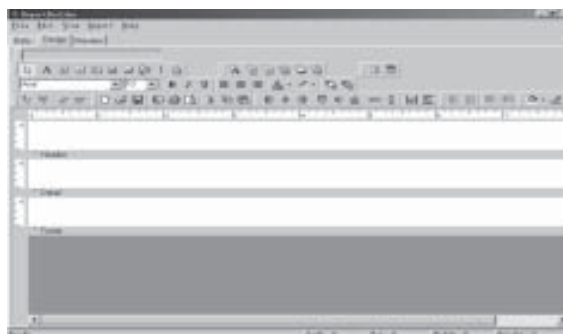


Fig. 8-2 Report Creating Interface

The main procedures are as follows:

1. Select Database Original: Click the page key 'Data' and then select 'File | Data Settings'. Then carry out the selection as in Fig. 8-3.

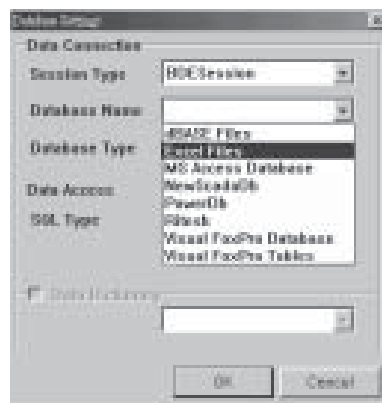


Fig. 8-3 Select the Database Original

2. Select the Table Menus

2.1 Select **File | New** and then click **Query Wizard**.

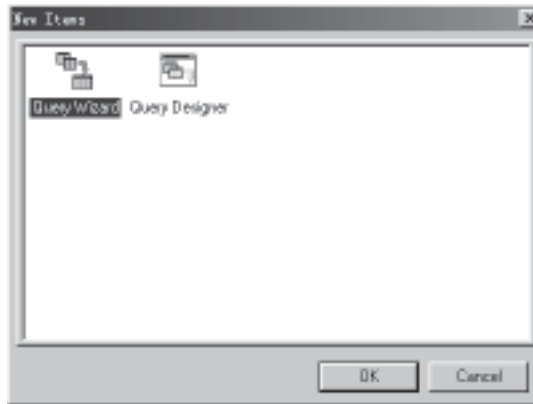


Fig. 8-4 Select the Listing Table 1

2.2 Double click the table name in Fig. 8-5. For example, Select **Digitaldatatable**, and it will appear in the listing table frame on the right. Then click the button **Next>**.

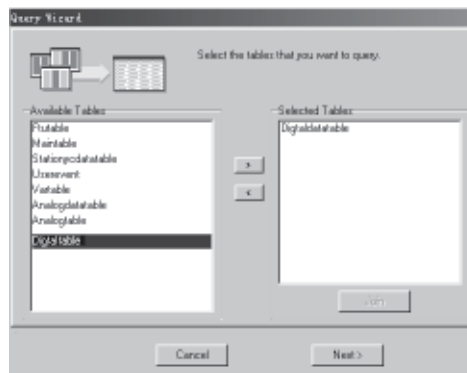


Fig. 8-5 Select the Listing Table 2

2.3 Choose the fields as in Fig. 8-6. **All Fields** means choosing all the fields and **Choose Fields** means choosing the wanted fields. Then click the **Next>** button.



Fig. 8-6 Select the Fields

2.4 Select the Calculating Fields as in Fig. 8-6: **No Calculations** means no calculating fields and **Add Calculations** means adding the calculating fields. Then click the **Next>** button.

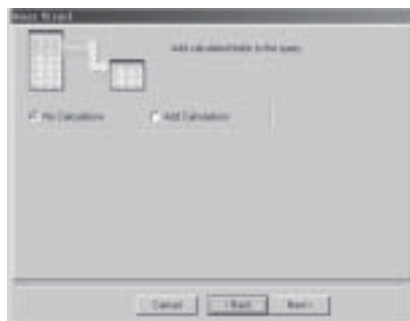


Fig. 8-7 Select the Calculating Fields

2.5 Select the Grouping Fields as in Fig. 8-7. 'No Grouping' means no grouping fields and 'Select Grouping Fields' means adding grouping fields. And then click the 'Next' button.



Fig. 8-8 Select the Grouping Fields

2.6 Select the query condition as in Fig. 8-9. 'All Rows' means selecting all the records and 'Define Search Criteria' means selecting the records to be queried. And then click the 'Next' button.



Fig. 8-9 Select the Query Conditions

2.7 Select the ordering conditions as in Fig. 8-10. 'Natural Order' means not ordering and 'Set Order' means selecting the ordering fields. Then click the 'Next' button.



Fig. 8-10 Set Ordering Fields

2.8 Click the **Finish** button as in Fig. 8-11. Then the listing table of the database that has been set will be displayed as in Fig. 8-12.

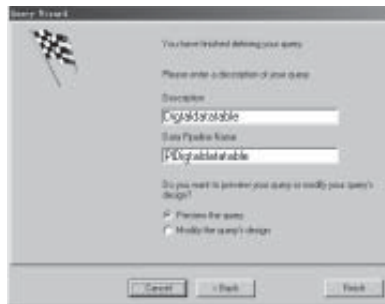


Fig. 8-11 Last Step of Selecting the Listing Tables

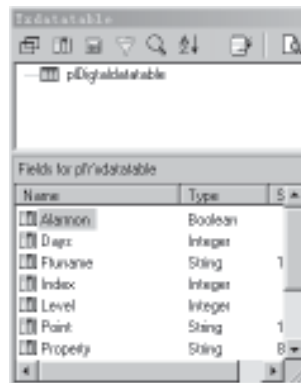


Fig. 8-12 The Completion of Selecting Listing Tables

3. Select the page key **Design** and enter the report design window:

3.1 Title: For example, as in Fig. 8-13, set the title of the report as **Report for DigitalDataTable**.

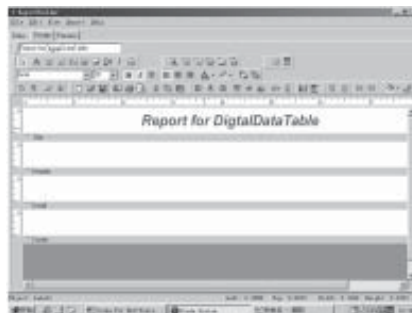


Fig. 8-13 Design the Title of the Report

3.2 Design the Head of the Report. For example, as in Fig. 8-14, set the labels such as ;°Index;±, ;°Station;±, ;°FtuName;±and so on.

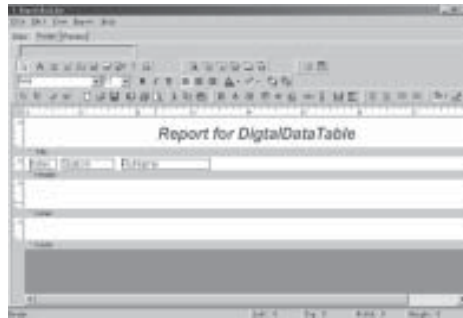


Fig. 8-14 Design the Head of the Report

3.3 Design the Body of the Report. For example, as in Fig. 8-15, set the fields such as ;°Index;±, ;°Station;±, ;°FtuName;±and so on.

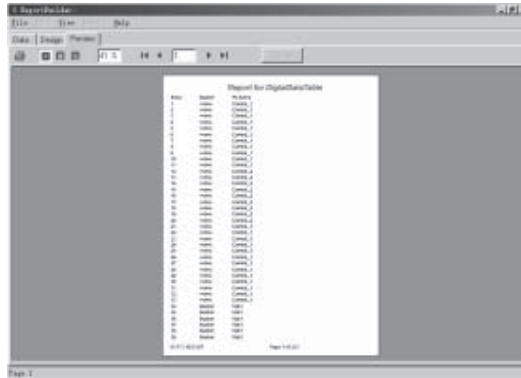


Fig. 8-15 Design the Body of the Report

3.4 Design the Pin Part of the Report: For example, as in Fig. 8-16, set the system variable as ;°DateTime;±, ;°PageSetDesc;±.

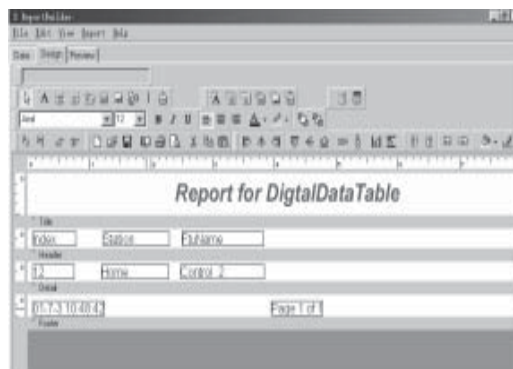


Fig. 8-16 Design the Date and the Page Code

4. Preview the Report: Select and click the page key ;°Preview;±as in Fig. 8-16. And the diagram as in Fig. 8-17 will be displayed.

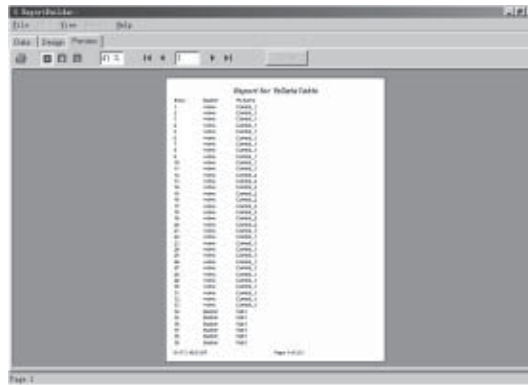


Fig. 8-17 Preview the Report

Explanation: Refer to *Report Builder Users Manual* for detailed help information.

8.2 Browse

Select *Report | Browse* or click the fast button , then the diagram as in Fig. 8-18 will be displayed.

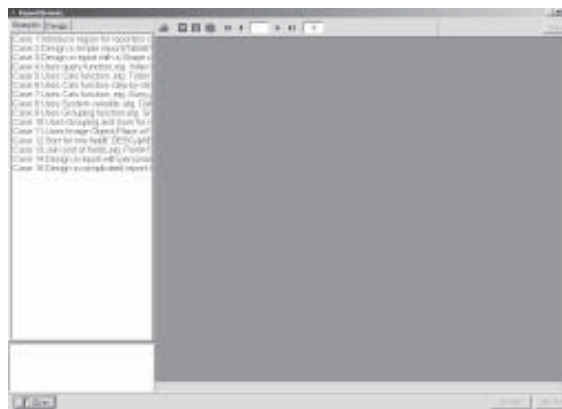


Fig. 8-18 Reports-Browsing Interface

1. The example of browsing the report. Select the page key *Examples*. Click the listing option in the listing table, the browsing results will be shown in the sub-interface as in Fig. 8-19. Double click the listing option, the designing interface will be shown as in Fig. 8-20. And the example is non-changeable.

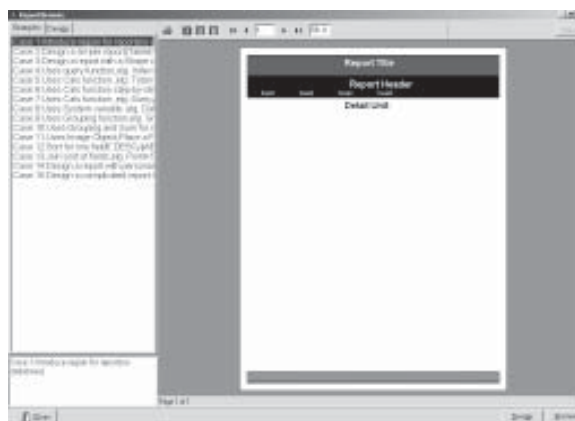


Fig. 8-19 Click the Listing Option Once

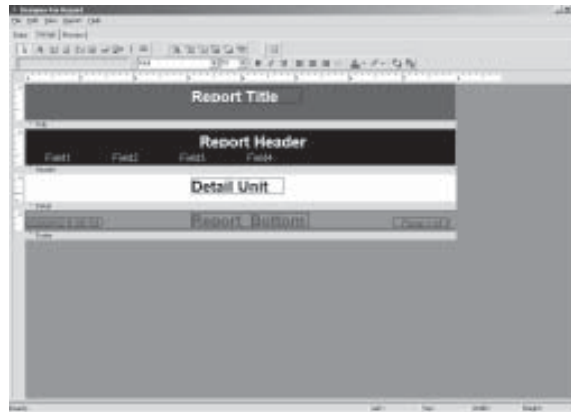


Fig. 8-20 Click the Listing Option Twice

2. Design the Report: Select the page key ;°Design;±and the listing table is empty if opened for the first time, as in Fig. 8-21.

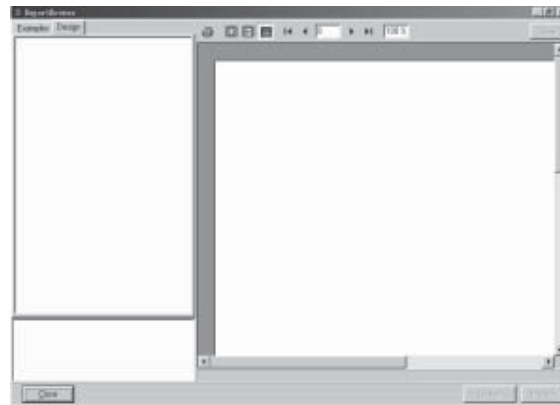


Fig. 8-21 Select the Page Key ;°Design;±

2.1 Add the Designed Report to the Table List. Click the right key of the mouse in the listing table, and the dialogue block as in Fig. 8-22 will be shown. Select the function option ;°Append;±and the dialogue block as in Fig. 8-23 will be shown.

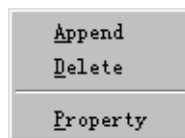


Fig. 8-22 Click the Right Key of the Mouse

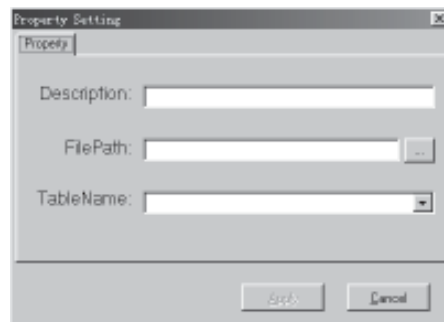


Fig. 8-23 Select the ;°Append;±Function Option

In Fig. 8-21, enter the name describing the use of the report in the position of `°Description;` and the path and name of the report in the position of `°FilePath;` or click the button `...` to open the dialogue block of selecting the files to be opened. Then click the button `°Apply2;` in Fig. 8-24. And at the same time, a new record is added to the listing table frame as in Fig. 8-25.

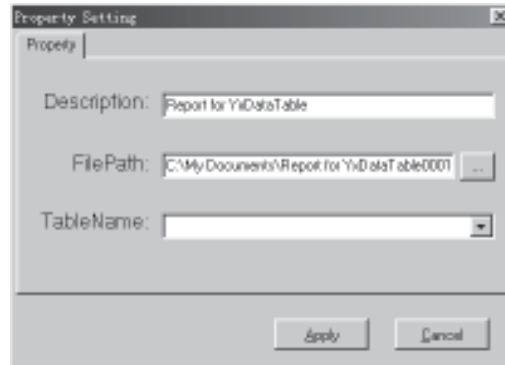


Fig. 8-24 Entering the Options

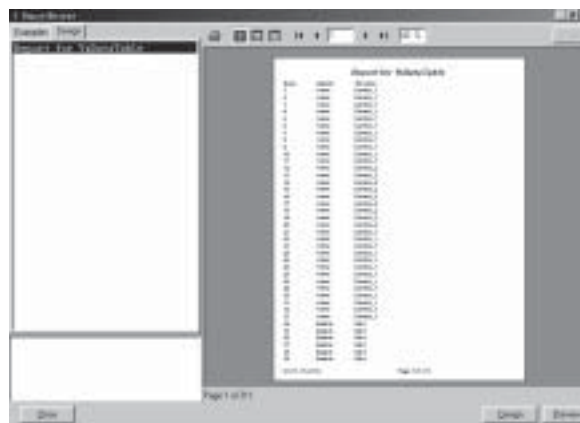


Fig. 8-25 The Page After Clicking the button `°Apply;`

At this time, the user can preview the report by clicking the mouse once and design the report by clicking the mouse twice.

2.2 Delete the listing option from the listing table. First select the listing option to be deleted and then click the right key of the mouse. Then the dialogue block as in Fig. 8-22 will be shown. Select the `°Delete;` function option.

2.3 Modify the properties of the listing option. First select the listing option to be modified and then click the right key of the mouse. Then the dialogue block as in Fig. 8-23 will be shown. Select the `°Property;` function option, then the dialogue block as in Fig. 8-26 will be shown. In the dialogue block, modifying the `°Description;` and `°FilePath;`, and then click the button `°Apply;`. Thus the modification is completed.

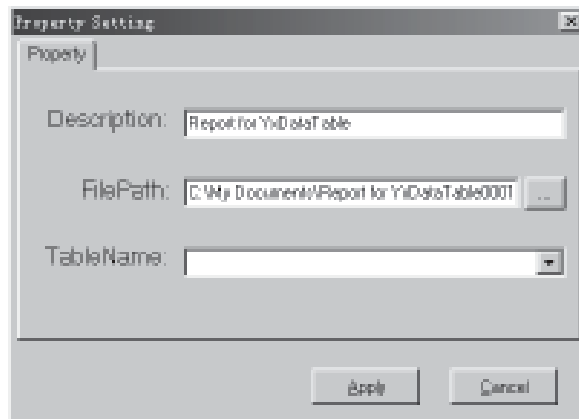


Fig. 8-26 Properties Modifying Dialogue Block